

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	EFI	✓	✓	✓		1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	A/B	✓	✓			1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	A/T	✓	✓	✓	✓	1.Read ECU No. 2.A/T Learning Value Initialization	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	A/B	✓	✓			1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-SE	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	00/10(H12/10)- 01/06(H13/06)	EF-SE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-SE	A/B	✓	✓			1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE	CVT	✓	✓	✓		1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE	A/B	✓	✓			1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE2	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE2	CVT	✓	✓	✓		1.Read ECU No.	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE2	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE2	EPS	✓	✓	✓		1.Read ECU No. 2.Torque sensor zero point adjustment	
Mira	00/10(H12/10)- 01/06(H13/06)	EF-VE2	A/B	✓	✓			1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-DET	A/T	✓	✓	✓	✓	1.Read ECU No. 2.A/T Learning Value Initialization	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	01/06(H13/06)- 02/12(H14/12)	EF-DET	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-DET	A/B	✓	✓			1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-SE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-SE	ABS	✓	✓	✓	✓	1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-SE	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE	CVT	✓	✓	✓		1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE2	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE2	CVT	✓	✓	✓		1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE2	ABS	✓	✓	✓	✓	1.Read ECU No.	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE2	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	01/06(H13/06)- 02/12(H14/12)	EF-VE2	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	02/12(H14/12)- 04/12(H16/12)	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-DET	A/T	✓	✓	✓	✓	1.Read ECU No. 2.A/T Learning Value Initialization	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-DET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	02/12(H14/12)- 04/12(H16/12)	EF-DET	A/B	✓	✓			1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-DET	KFS	✓	✓	✓		1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-SE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-SE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-SE	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	02/12(H14/12)- 04/12(H16/12)	EF-SE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VD	EFI	√	√	√	√	1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VD	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VD	A/B	√	√			1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VD	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VE	EFI	√	√	√	√	1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VE	CVT	√	√	√		1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VE	A/B	√	√			1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VN	EFI	√	√	√	√	1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VN	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VN	A/B	√	√			1.Read ECU No.	
Mira	02/12(H14/12)- 04/12(H16/12)	EF-VN	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-DET	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	04/12(H16/12)- 06/12(H18/12)	EF-DET	A/T	√	√	√	√	1.Read ECU No. 2.A/T Learning Value Initialization	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-DET	DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-DET	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-DET	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	04/12(H16/12)- 06/12(H18/12)	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-SE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-SE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-SE	A/B	✓	✓			1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-SE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VD	EFI	√	√	√	√	1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VD	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VD	A/B	√	√			1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VD	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(BEYOND CVT)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(BEYOND CVT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(BEYOND CVT)	A/B	√	√			1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(BEYOND CVT)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(CVT)	EFI	√	√	√	√	1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(CVT)	CVT	√	√	√		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(CVT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(CVT)	A/B	√	√			1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VE(CVT)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VN	EFI	√	√	√	√	1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VN	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VN	A/B	√	√			1.Read ECU No.	
Mira	04/12(H16/12)- 06/12(H18/12)	EF-VN	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	EFI	√	√	√	√	1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	ACC	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	EPS	✓	✓	✓		1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	A/B	✓	✓			1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	ITC	√	√	√	√	1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-DET	Power Source	√	√	√	√	1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	EFI	√	√	√	√	1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	ERS	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	EPS	✓	✓	✓		1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	A/B	✓	✓			1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VE	Power Source	✓	✓	✓	✓	1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VN	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VN	EPS	✓	✓	✓		1.Read ECU No.	
Mira	06/12(H18/12)- 08/12(H20/12)	KF-VN	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	EFI	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	ACC	√	√			1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	VSC	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	EPS	√	√	√		1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	A/B	√	√			1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	ITC	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/O Pre-Crash)	Power Source	✓	✓	✓	✓	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	ACC	✓	✓			1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	EPS	✓	✓	✓		1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	A/B	✓	✓			1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	ITC	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-DET(W/ Pre-Crash)	Power Source	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	EFI	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	ERS	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	EPS	√	√	√		1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	A/B	√	√			1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	ITC	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/O Pre-Crash)	Power Source	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	EFI	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	ERS	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	EPS	√	√	√		1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	A/B	√	√			1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	ITC	√	√	√	√	1.Read ECU No.	
Mira	08/12(H20/12)- 10/04(H22/04)	KF-VE(W/ Pre-Crash)	Power Source	√	√	√	√	1.Read ECU No.	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-DET	EFI	√	√	√	√	1.Read ECU No.	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-DET	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-DET	EPS	✓	✓	✓		1.Read ECU No.	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-DET	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-DET	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-DET	ITC	√	√	√	√	1.Read ECU No.	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	ERS	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	EPS	✓	✓	✓		1.Read ECU No.	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	A/B	✓	✓			1.Read ECU No.	
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	10/04(H22/04)- 11/07(H23/07)- 13/02(H25/02)	KF-VE	ITC	√	√	√	√	1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(VanSeries)	EFI	√	√	√	√	1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(VanSeries)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(VanSeries)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(VanSeries)	EPS	√	√	√		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(VanSeries)	A/B	✓	✓			1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(VanSeries)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,2WD)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,2WD)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,2WD)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,2WD)	EPS	✓	✓	✓		1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,2WD)	A/B	✓	✓			1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,2WD)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,2WD)	ITC	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,M/T)	EFI	√	√	√	√	1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,M/T)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,M/T)	EPS	√	√	√		1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,M/T)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,M/T)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,M/T)	ITC	√	√	√	√	1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,CVT)	EFI	√	√	√	√	1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,CVT)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,CVT)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,CVT)	EPS	✓	✓	✓		1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,CVT)	A/B	✓	✓			1.Read ECU No.	
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,CVT)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira	11/07(H23/07)- 13/02(H25/02)	KF(N/A)(Sedan Series,4WD,CVT)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Mira	13/02(H25/02)-	KF(N/A)	EFI	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Mira	13/02(H25/02)-	KF(N/A)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira	13/02(H25/02)-	KF(N/A)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira	13/02(H25/02)-	KF(N/A)	EPS	✓	✓	✓		1.Read ECU No.	
Mira	13/02(H25/02)-	KF(N/A)	A/B	✓	✓			1.Read ECU No.	
Mira	13/02(H25/02)-	KF(N/A)	ITC	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	EFI	✓	✓	✓		1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Mechannism AT)	A/B	✓	✓			1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	A/B	✓	✓			1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	EF-DET(Electrical Control AT)	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/ tyre blow-up device)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/ tyre blow-up device)	CVT	✓	✓	✓		1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/ tyre blow-up device)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/ tyre blow-up device)	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/ tyre blow-up device)	A/B	✓	✓			1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/O tyre blow-up device)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/O tyre blow-up device)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	00/10(H12/10)- 01/06(H13/06)	EF-VE(W/O tyre blow-up device)	A/B	✓	✓			1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	JB-DET	EFI	✓	✓	✓		1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	00/10(H12/10)- 01/06(H13/06)	JB-DET	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	00/10(H12/10)- 01/06(H13/06)	JB-DET	A/B	✓	✓			1.Read ECU No.	
Move	00/10(H12/10)- 01/06(H13/06)	JB-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	01/06(H13/06)- 01/10(H13/10)	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Move	01/06(H13/06)- 01/10(H13/10)	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	01/06(H13/06)- 01/10(H13/10)	EF-DET	A/B	✓	✓			1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	01/06(H13/06)- 01/10(H13/10)	EF-VE(W/ tyre blow-up device)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	EF-VE(W/ tyre blow-up device)	CVT	✓	✓	✓		1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	EF-VE(W/ tyre blow-up device)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	01/06(H13/06)- 01/10(H13/10)	EF-VE(W/ tyre blow-up device)	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Move	01/06(H13/06)- 01/10(H13/10)	EF-VE(W/ tyre blow-up device)	A/B	√	√			1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	EF-VE(W/O tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	EF-VE(W/O tyre blow-up device)	A/B	√	√			1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	JB-DET	EFI	√	√	√		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	01/06(H13/06)- 01/10(H13/10)	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	01/06(H13/06)- 01/10(H13/10)	JB-DET	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Move	01/06(H13/06)- 01/10(H13/10)	JB-DET	A/B	✓	✓			1.Read ECU No.	
Move	01/06(H13/06)- 01/10(H13/10)	JB-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	01/10(H13/10)- 02/10(H14/10)	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	01/10(H13/10)- 02/10(H14/10)	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Move	01/10(H13/10)- 02/10(H14/10)	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	01/10(H13/10)- 02/10(H14/10)	EF-DET	A/B	✓	✓			1.Read ECU No.	
Move	01/10(H13/10)- 02/10(H14/10)	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/ tyre blow-up device)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/ tyre blow-up device)	CVT	√	√	√		1.Read ECU No.	
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/ tyre blow-up device)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/ tyre blow-up device)	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/ tyre blow-up device)	A/B	√	√			1.Read ECU No.	
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/O tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/O tyre blow-up device)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	01/10(H13/10)- 02/10(H14/10)	EF-VE(W/O tyre blow-up device)	A/B	✓	✓			1.Read ECU No.	
Move	01/10(H13/10)- 02/10(H14/10)	JB-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	01/10(H13/10)- 02/10(H14/10)	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Move	01/10(H13/10)- 02/10(H14/10)	JB-DET	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	01/10(H13/10)- 02/10(H14/10)	JB-DET	A/B	✓	✓			1.Read ECU No.	
Move	01/10(H13/10)- 02/10(H14/10)	JB-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	02/10(H14/10)- 04/12(H16/12)	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	02/10(H14/10)- 04/12(H16/12)	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Move	02/10(H14/10)- 04/12(H16/12)	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	02/10(H14/10)- 04/12(H16/12)	EF-DET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Move	02/10(H14/10)- 04/12(H16/12)	EF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Move	02/10(H14/10)- 04/12(H16/12)	EF-DET	A/B	✓	✓			1.Read ECU No.	
Move	02/10(H14/10)- 04/12(H16/12)	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	02/10(H14/10)- 04/12(H16/12)	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	02/10(H14/10)- 04/12(H16/12)	EF-VE	CVT	✓	✓	✓		1.Read ECU No.	
Move	02/10(H14/10)- 04/12(H16/12)	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	02/10(H14/10)- 04/12(H16/12)	EF-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Move	02/10(H14/10)- 04/12(H16/12)	EF-VE	A/B	✓	✓			1.Read ECU No.	
Move	02/10(H14/10)- 04/12(H16/12)	EF-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	A/B	✓	✓			1.Read ECU No.	
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	02/10(H14/10)- 04/12(H16/12)	JB-DET	ACC	✓	✓			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
Move	04/12(16/12)- 06/10(H18/10)	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	04/12(16/12)- 06/10(H18/10)	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	04/12(16/12) - 06/10(H18/10)	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	04/12(16/12) - 06/10(H18/10)	EF-DET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Move	04/12(16/12) - 06/10(H18/10)	EF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Move	04/12(16/12) - 06/10(H18/10)	EF-DET	A/B	✓	✓			1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(BEYOND CVT)	EFI	√	√	√	√	1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(BEYOND CVT)	AT	√	√	√		1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(BEYOND CVT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(BEYOND CVT)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(BEYOND CVT)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(BEYOND CVT)	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(CVT)	EFI	√	√	√	√	1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(CVT)	CVT	√	√	√		1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(CVT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(CVT)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(CVT)	A/B	✓	✓			1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	EF-VE(CVT)	KFS	✓	✓	✓		1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	A/B	✓	✓			1.Read ECU No.	
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move	04/12(16/12) - 06/10(H18/10)	JB-DET	ACC	✓	✓			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	06/10(H18/10)- 08/12(H20/12)	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	06/10(H18/10)- 08/12(H20/12)	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	06/10(H18/10)- 08/12(H20/12)	KF-VE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-VE	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	06/10(H18/10)- 08/12(H20/12)	KF-VE	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	06/10(H18/10)- 08/12(H20/12)	KF-VE	ITC	√	√	√	√	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	EFI	√	√	√	√	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	ACC	√	√			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	VSC	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	ITC	√	√	√	√	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	Power Source	√	√	√	√	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	PSB-D	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	PSD-P	✓	✓	✓	✓	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/ Pre- Crash)	IMG	✓	✓	✓		1.Read ECU No. 2.Camera Optical Axis Adjustment	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	ACC	✓	✓			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	ITC	√	√	√	√	1.Read ECU No.	
Move	06/10(H18/10)- 08/12(H20/12)	KF-DET(w/o Pre- Crash)	Power Source	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	ACC	✓	✓			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	A/B	√	√			1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	ITC	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	Power Source	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	PSB-D	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	PSD-P	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/ Pre- Crash)	IMG	√	√	√		1.Read ECU No. 2.Camera Optical Axis Adjustment	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	EFI	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	ACC	✓	✓			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/ Smart Key/w/o Pre- Crash)	Power Source	✓	✓	✓	✓	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/ Pre-Crash)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/Pre-Crash)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/Pre-Crash)	ACC	✓	✓			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/Pre-Crash)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/Pre-Crash)	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/Pre-Crash)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/ Pre-Crash)	A/B	√	√			1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/ Pre-Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/ Pre-Crash)	ITC	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/ Pre-Crash)	PSB-D	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/ Pre-Crash)	PSD-P	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/ Pre-Crash)	IMG	√	√	√		1.Read ECU No. 2.Camera Optical Axis Adjustment	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	EFI	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	ACC	√	√			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	VSC	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	08/12(H20/12)- 09/12(H21/12)	KF-DET(w/o Smart Key/w/o Pre-Crash)	ITC	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	EFI	√	√	√	√	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	A/B	√	√			1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/ Smart Key)	Power Source	✓	✓	✓	✓	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/o Smart Key)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/o Smart Key)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/o Smart Key)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/o Smart Key)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/o Smart Key)	A/B	√	√			1.Read ECU No.	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/o Smart Key)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	08/12(H20/12)- 09/12(H21/12)	KF-VE(w/o Smart Key)	ITC	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	EFI	√	√	√	√	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	ITC	√	√	√	√	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/ Smart Key)	Power Source	√	√	√	√	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/ Smart Key)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/ Smart Key)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/ Smart Key)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/ Smart Key)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/ Smart Key)	A/B	√	√			1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/ Smart Key)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/ Smart Key)	ITC	√	√	√	√	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	EFI	√	√	√	√	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	A/B	√	√			1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	ITC	√	√	√	√	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-DET(w/o Smart Key)	Power Source	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	ITC	√	√	√	√	1.Read ECU No.	
Move	09/12(H21/12)- 10/12(H22/12)	KF-VE(w/o Smart Key)	Power Source	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	A/B	√	√			1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	ITC	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	PSB-D	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	PSD-P	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyless)	Meter	√	√	√			
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	EFI	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	A/B	✓	✓			1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	ITC	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	PSB-D	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	PSD-P	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	Meter	√	√	√			
Move	10/12(H22/12)- 11/08(H23/08)	KF(N/A)(Keyfree)	DSS	√	√	√		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECU Learning Initializing	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	eco IDLE	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	A/B	√	√			1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	ITC	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	PSB-D	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	PSD-P	√	√	√	√	1.Read ECU No.	
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	Meter	√	√	√			
Move	10/12(H22/12)- 11/08(H23/08)	KF(T/C)	DSS	√	√	√		1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	EFI	√	√	√	√	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	ABS/VSC	√	√	√	√	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	A/B	√	√			1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	ITC	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	PSB-D	√	√	√	√	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	PSD-P	√	√	√	√	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	Meter	√	√	√			
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyless)	DSS	√	√	√		1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	ABS/VSC	√	√	√	√	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	ITC	√	√	√	√	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	PSB-D	√	√	√	√	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	PSD-P	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	Meter	√	√	√			
Move	11/08(H23/08)- 11/11(H23/11)	KF(N/A)(Keyfree)	DSS	√	√	√		1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	EFI	√	√	√	√	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	A/B	✓	✓			1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	PSB-D	✓	✓	✓	✓	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	PSD-P	✓	✓	✓	✓	1.Read ECU No.	
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	Meter	✓	✓	✓			
Move	11/08(H23/08)- 11/11(H23/11)	KF(T/C)	DSS	✓	✓	✓		1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	EFI	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	EPS	√	√	√		1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	ABS/VSC	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	A/B	√	√			1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyless)	Meter	✓	✓	✓	✓	1.Read ECU No. 2.Instrument panel standard initialization	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	eco IDLE	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	EPS	✓	✓	✓		1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	A/B	✓	✓			1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	ITC	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A)(Keyfree)	Meter	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	EFI	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	EPS	√	√	√		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	A/B	✓	✓			1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	ITC	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	PSB-D	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	PSB-P	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	Meter	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Move	11/11(H23/11)- 12/05(H24/05)	KF(T/C)	DSS	√	√	√		1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyless)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyle ss)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyle ss)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyle ss)	EPS	√	√	√		1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyle ss)	ABS/VSC	√	√	√	√	1.Read ECU No. 2.2nd bleeding	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyle ss)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyless)	ITC	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyless)	Meter	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyless)	EFI	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyless)	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyless)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)	EPS	✓	✓	✓		1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)	A/B	✓	✓			1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)	ITC	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)	PSB-D	√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)		√	√	√	√	1.Read ECU No.	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)	PSB- PMeter DSS	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Move	11/11(H23/11)- 12/05(H24/05)	KF(N/A,T/C)(Keyfr ee)		√	√	√		1.Read ECU No.	
Move	12/12(H24/12)-	KF(N/A,T/C)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	12/12(H24/12)-	KF(N/A,T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move	12/12(H24/12)-	KF(N/A,T/C)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move	12/12(H24/12)-	KF(N/A,T/C)	EPS	√	√	√		1.Read ECU No.	
Move	12/12(H24/12)-	KF(N/A,T/C)	ABS/VSC	√	√	√	√	1.Read ECU No. 2.2nd bleeding	
Move	12/12(H24/12)-	KF(N/A,T/C)	A/B	√	√			1.Read ECU No.	
Move	12/12(H24/12)-	KF(N/A,T/C)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move	12/12(H24/12)-	KF(N/A,T/C)	ITC	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move	12/12(H24/12)-	KF(N/A,T/C)	Meter	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Move	12/12(H24/12)-	KF(N/A,T/C)	PCB	√	√	√	√	1.Read ECU No. 2.Laser radar optical axle adjustment	
Move	12/12(H24/12)-	KF(N/A,T/C)	Automati c leveling	√	√	√	√	1.Read ECU No.	
YRV	00/08-00/12	EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
YRV	00/08-00/12	EJ-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
YRV	00/08-00/12	EJ-VE	A/B	√	√			1.Read ECU No.	
YRV	00/08-00/12	K3-VE	EFI	√	√	√	√	1.Read ECU No.	
YRV	00/08-00/12	K3-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
YRV	00/08-00/12	K3-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
YRV	00/08-00/12	K3-VE	DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
YRV	00/08-00/12	K3-VE	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
YRV	00/08-00/12	K3-VE	KFS	✓	✓				
YRV	00/08-00/12	K3-VET	EFI	✓	✓	✓	✓	1.Read ECU No.	
YRV	00/08-00/12	K3-VET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
YRV	00/08-00/12	K3-VET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
YRV	00/08-00/12	K3-VET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
YRV	00/08-00/12	K3-VET	A/B	✓	✓			1.Read ECU No.	
YRV	00/08-00/12	K3-VET	KFS	✓	✓				
YRV	00/12-	EJ-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
YRV	00/12-	EJ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
YRV	00/12-	EJ-VE	A/B	✓	✓			1.Read ECU No.	
YRV	00/12-	K3-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
YRV	00/12-	K3-VE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
YRV	00/12-	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
YRV	00/12-	K3-VE	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
YRV	00/12-	K3-VE	A/B	✓	✓			1.Read ECU No.	
YRV	00/12-	K3-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
YRV	00/12-	K3-VET	EFI	✓	✓	✓	✓	1.Read ECU No.	
YRV	00/12-	K3-VET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
YRV	00/12-	K3-VET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
YRV	00/12-	K3-VET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
YRV	00/12-	K3-VET	A/B	✓	✓			1.Read ECU No.	
YRV	00/12-	K3-VET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Atrai Wagon	01/01-02/01	EF-DET	EFI	✓	✓	✓		1.Read ECU No.	
Atrai Wagon	01/01-02/01	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Atrai Wagon	01/01-02/01	EF-DET	A/B	✓	✓			1.Read ECU No.	
Atrai Wagon	01/01-02/01	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Atrai Wagon	01/01-02/01	EF-VE	EFI	✓	✓	✓		1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Atrai Wagon	01/01-02/01	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Atrai Wagon	01/01-02/01	EF-VE	A/B	✓	✓			1.Read ECU No.	
Atrai Wagon	01/01-02/01	EF-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Atrai Wagon	02/01-03/05	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Atrai Wagon	02/01-03/05	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Atrai Wagon	02/01-03/05	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Atrai Wagon	02/01-03/05	EF-DET	A/B	✓	✓			1.Read ECU No.	
Atrai Wagon	02/01-03/05	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Atrai Wagon	02/01-03/05	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Atrai Wagon	02/01-03/05	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Atrai Wagon	02/01-03/05	EF-VE	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Atrai Wagon	02/01-03/05	EF-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Atrai Wagon	03/05-05/04	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
Atrai Wagon	03/05-05/04	EF-DET	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Atrai Wagon	03/05-05/04	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Atrai Wagon	03/05-05/04	EF-DET	A/B	√	√			1.Read ECU No.	
Atrai Wagon	03/05-05/04	EF-DET	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Atrai Wagon	03/05-05/04	EF-VE	EFI	√	√	√	√	1.Read ECU No.	
Atrai Wagon	03/05-05/04	EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Atrai Wagon	03/05-05/04	EF-VE	A/B	√	√			1.Read ECU No.	
Atrai Wagon	03/05-05/04	EF-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Atrai Wagon	05/05-07/08	EF-DET(A/T)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Atrai Wagon	05/05-07/08	EF-DET(A/T)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Atrai Wagon	05/05-07/08	EF-DET(A/T)	A/B	√	√			1.Read ECU No.	
Atrai Wagon	05/05-07/08	EF-DET(M/T)	EFI	√	√	√	√	1.Read ECU No.	
Atrai Wagon	05/05-07/08	EF-DET(M/T)	ABS	√	√	√	√	1.Read ECU No.	
Atrai Wagon	05/05-07/08	EF-DET(M/T)	A/B	√	√			1.Read ECU No.	
Atrai Wagon	07/08-10/08	KF-DET	EFI	√	√	√	√	1.Read ECU No.	
Atrai Wagon	07/08-10/08	KF-DET	ABS	√	√	√	√	1.Read ECU No.	
Atrai Wagon	07/08-10/08	KF-DET	A/B	√	√			1.Read ECU No.	
Atrai-7/Hijet Grancargo	00/07-01/06	K3-VE	EFI	√	√	√	√	1.Read ECU No.	
Atrai-7/Hijet Grancargo	00/07-01/06	K3-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Atrai-7/Hijet Grancargo	00/07-01/06	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Atrai-7/Hijet Grancargo	00/07-01/06	K3-VE	A/B	✓	✓			1.Read ECU No.	
Atrai-7/Hijet Grancargo	00/07-01/06	K3-VE	KFS	✓	✓				
Atrai-7/Hijet Grancargo	01/06-	K3-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Atrai-7/Hijet Grancargo	01/06-	K3-VE	AT	✓	✓	✓		1.Read ECU No.	
Atrai-7/Hijet Grancargo	01/06-	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Atrai-7/Hijet Grancargo	01/06-	K3-VE	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Atrai-7/Hijet Grancargo	01/06-	K3-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Altis	00/03-01/09	5S-FE	EFI&AT						Use Toyota software to test it.
Altis	00/03-01/09	5S-FE	A/B	✓	✓				
Altis	01/09-06/01	2AZ-FE	EFI&AT						Use Toyota software to test it.
Altis	01/09-06/01	2AZ-FE	A/B	✓	✓				
Altis	06/01-09/01	2AZ-FE						1.Read ECU No.	Use Toyota software to test it.
Altis	09/01-	2AZ-FE						1.Read ECU No.	Use Toyota software to test it.
Esse	05/12-10/04	KF-VE(A/T)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Esse	05/12-10/04	KF-VE(A/T)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Esse	05/12-10/04	KF-VE(A/T)	A/B	√	√			1.Read ECU No.	
Esse	05/12-10/04	KF-VE(M/T)	EFI	√	√	√	√	1.Read ECU No.	
Esse	05/12-10/04	KF-VE(M/T)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Esse	05/12-10/04	KF-VE(M/T)	A/B	√	√			1.Read ECU No.	
Esse	10/04-	KF-VE	EFI	√	√	√	√	1.Read ECU No.	
Esse	10/04-	KF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Esse	10/04-	KF-VE	A/B	√	√			1.Read ECU No.	
Opti	00/10-01/06	EF-DET(Mechannism AT)	EFI	√	√	√		1.Read ECU No.	
Opti	00/10-01/06	EF-DET(Mechannism AT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Opti	00/10-01/06	EF-DET(Mechannism AT)	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Opti	00/10-01/06	EF-DET(Mechannism AT)	A/B	√	√			1.Read ECU No.	
Opti	00/10-01/06	EF-DET(Electrical Control AT)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Opti	00/10-01/06	EF-DET(Electrical Control AT)	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Opti	00/10-01/06	EF-DET(Electrical Control AT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Opti	00/10-01/06	EF-DET(Electrical Control AT)	DVS	√	√	√	√	1.Read ECU No.	
Opti	00/10-01/06	EF-DET(Electrical Control AT)	A/B	√	√			1.Read ECU No.	
Opti	00/10-01/06	EF-SE	EFI	√	√	√	√	1.Read ECU No.	
Opti	00/10-01/06	EF-SE	ABS	√	√	√	√	1.Read ECU No.	
Opti	00/10-01/06	EF-SE	A/B	√	√			1.Read ECU No.	
Opti	00/10-01/06	EF-VE	EFI	√	√	√	√	1.Read ECU No.	
Opti	00/10-01/06	EF-VE	CVT	√	√	√		1.Read ECU No.	
Opti	00/10-01/06	EF-VE	ABS	√	√	√	√	1.Read ECU No.	
Opti	00/10-01/06	EF-VE	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Opti	00/10-01/06	EF-VE	A/B	✓	✓			1.Read ECU No.	
Opti	01/06-02/08	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Opti	01/06-02/08	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Opti	01/06-02/08	EF-DET	A/B	✓	✓			1.Read ECU No.	
Opti	01/06-02/08	EF-SE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Opti	01/06-02/08	EF-SE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Opti	01/06-02/08	EF-SE	A/B	✓	✓			1.Read ECU No.	
Opti	01/06-02/08	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Opti	01/06-02/08	EF-VE	CVT	✓	✓	✓		1.Read ECU No.	
Opti	01/06-02/08	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Opti	01/06-02/08	EF-VE	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Opti	01/06-02/08	EF-VE	A/B	✓	✓			1.Read ECU No.	
COO	06/05-10/07	K3-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
COO	06/05-10/07	K3-VE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
COO	06/05-10/07	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
COO	06/05-10/07	K3-VE	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
COO	06/05-10/07	K3-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
COO	06/05-10/07	K3-VE	A/B	✓	✓			1.Read ECU No.	
COO	06/05-10/07	3SZ-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
COO	06/05-10/07	3SZ-VE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
COO	06/05-10/07	3SZ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
COO	06/05-10/07	3SZ-VE	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
COO	06/05-10/07	3SZ-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
COO	06/05-10/07	3SZ-VE	A/B EFI	✓✓	✓✓	✓	✓	1.Read ECU No.	
COO	10/07-	3SZ-VE						1.Read ECU No.	
COO	10/07-	3SZ-VE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
COO	10/07-	3SZ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
COO	10/07-	3SZ-VE	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
COO	10/07-	3SZ-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
COO	10/07-	3SZ-VE	A/B EFI	✓✓	✓✓	✓	✓	1.Read ECU No.	
COO	10/07-	K3-VE	AT					1.Read ECU No.	
COO	10/07-	K3-VE			✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization
COO	10/07-	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
COO	10/07-	K3-VE	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
COO	10/07-	K3-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
COO	10/07-	K3-VE	A/B	✓	✓			1.Read ECU No.	
Copen	02/06-10/08	JB-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Copen	02/06-10/08	JB-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Copen	02/06-10/08	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Copen	02/06-10/08	JB-DET	A/B	✓	✓			1.Read ECU No.	
Copen	02/06-10/08	JB-DET	IMB	✓	✓			1.Read ECU No.	
Copen	02/06-10/08	JB-DET	roof	✓	✓	✓	✓	1.Read ECU No. 2.Roof ECU Initialization	
Copen	10/08-14/06	JB-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Copen	10/08-14/06	JB-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Copen	10/08-14/06	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Copen	10/08-14/06	JB-DET	A/B	✓	✓			1.Read ECU No.	
Copen	10/08-14/06	JB-DET	IMB	✓	✓			1.Read ECU No.	
Copen	10/08-14/06	JB-DET	roof	✓	✓	✓	✓	1.Read ECU No. 2.Roof ECU Initialization	
Copen	14/06-	KF(T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Copen	14/06-	KF(T/C)	CVT	✓	✓	✓	✓	1.CVT ECULearning Initializing 2.Read ECU No.	
Copen	14/06-	KF(T/C)	eco IDLE	✓	✓	✓	✓	1.Eco-Run ECU Initialization Learning 2.Delete and input Starter Working Times	
Copen	14/06-	KF(T/C)	EPS	✓	✓	✓		1.Read ECU No.	
Copen	14/06-	KF(T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Copen	14/06-	KF(T/C)	A/B	✓	✓		✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Copen	14/06-	KF(T/C)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Copen	14/06-	KF(T/C)	Roof	√	√	√	√	1.Read ECU No. 2.Roof ECU Initialization	
Copen	14/06-	KF(T/C)	ITC	√	√	√	√	1.Read ECU No.	
Copen	14/06-	KF(T/C)	Meter	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Storia	00/05-00/12	EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
Storia	00/05-00/12	EJ-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Storia	00/05-00/12	EJ-VE	A/B	√	√			1.Read ECU No.	
Storia	00/05-00/12	EJ-VE	KFS	√	√				
Storia	00/05-00/12	K3-VE2	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Storia	00/05-00/12	K3-VE2	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Storia	00/05-00/12	K3-VE2	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Storia	00/05-00/12	K3-VE2	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Storia	00/05-00/12	K3-VE2	A/B	✓	✓			1.Read ECU No.	
Storia	00/05-00/12	K3-VE2	KFS	✓	✓				
Storia	00/12-02/01	EJ-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Storia	00/12-02/01	EJ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Storia	00/12-02/01	EJ-VE	A/B	✓	✓			1.Read ECU No.	
Storia	00/12-02/01	EJ-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Storia	00/12-02/01	K3-VE2	EFI	✓	✓	✓	✓	1.Read ECU No.	
Storia	00/12-02/01	K3-VE2	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Storia	00/12-02/01	K3-VE2	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Storia	00/12-02/01	K3-VE2	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Storia	00/12-02/01	K3-VE2	A/B	✓	✓			1.Read ECU No.	
Storia	00/12-02/01	K3-VE2	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Storia	02/01-02/08	EJ-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Storia	02/01-02/08	EJ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Storia	02/01-02/08	EJ-VE	A/B	✓	✓			1.Read ECU No.	
Storia	02/01-02/08	EJ-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Storia	02/01-02/08	K3-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Storia	02/01-02/08	K3-VE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Storia	02/01-02/08	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Storia	02/01-02/08	K3-VE	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Storia	02/01-02/08	K3-VE	A/B	✓	✓			1.Read ECU No.	
Storia	02/01-02/08	K3-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Storia	02/01-02/08	K3-VE2	EFI	✓	✓	✓	✓	1.Read ECU No.	
Storia	02/01-02/08	K3-VE2	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Storia	02/01-02/08	K3-VE2	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Storia	02/01-02/08	K3-VE2	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Storia	02/01-02/08	K3-VE2	A/B	✓	✓			1.Read ECU No.	
Storia	02/01-02/08	K3-VE2	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Storia	02/08-	EJ-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Storia	02/08-	EJ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Storia	02/08-	EJ-VE	A/B	✓	✓			1.Read ECU No.	
Storia	02/08-	EJ-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Storia	02/08-	JC-DET	EFI	√	√	√	√	1.Read ECU No.	
Storia	02/08-	JC-DET	A/B	√	√			1.Read ECU No.	
Storia	02/08-	K3-VE	EFI	√	√	√	√	1.Read ECU No.	
Storia	02/08-	K3-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Storia	02/08-	K3-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Storia	02/08-	K3-VE	DVS	√	√	√		1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.DVS Bleeding	
Storia	02/08-	K3-VE	A/B	√	√			1.Read ECU No.	
Storia	02/08-	K3-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Storia	02/08-	K3-VE2	EFI	√	√	√	√	1.Read ECU No.	
Storia	02/08-	K3-VE2	AT	√	√	√		1.Read ECU No.	
Storia	02/08-	K3-VE2	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Storia	02/08-	K3-VE2	DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
Storia	02/08-	K3-VE2	A/B	√	√			1.Read ECU No.	
Storia	02/08-	K3-VE2	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
SONICA	06/06-09/04	KF-DET	EFI	√	√	√	√	1.Read ECU No.	
SONICA	06/06-09/04	KF-DET	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
SONICA	06/06-09/04	KF-DET	ACC	✓	✓			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
SONICA	06/06-09/04	KF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
SONICA	06/06-09/04	KF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
SONICA	06/06-09/04	KF-DET	A/B	✓	✓			1.Read ECU No.	
SONICA	06/06-09/04	KF-DET	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
SONICA	06/06-09/04	KF-DET	ITC	✓	✓	✓	✓	1.Read ECU No.	
TANTOEXE	09/12-11/07	KF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
TANTOEXE	09/12-11/07	KF-DET	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
TANTOEXE	09/12-11/07	KF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
TANTOEXE	09/12-11/07	KF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
TANTOEXE	09/12-11/07	KF-DET	A/B	✓	✓			1.Read ECU No.	
TANTOEXE	09/12-11/07	KF-DET	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
TANTOEXE	09/12-11/07	KF-DET	ITC	✓	✓	✓	✓	1.Read ECU No.	
TANTOEXE	09/12-11/07	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
TANTOEXE	09/12-11/07	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
TANTOEXE	09/12-11/07	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
TANTOEXE	09/12-11/07	KF-VE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
TANTOEXE	09/12-11/07	KF-VE	A/B	√	√			1.Read ECU No.	
TANTOEXE	09/12-11/07	KF-VE	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
TANTOEXE	09/12-11/07	KF-VE	ITC	√	√	√	√	1.Read ECU No.	
TANTOEXE	11/07-11/12	KF(N/A)	EFI	√	√	√	√	1.Read ECU No.	
TANTOEXE	11/07-11/12	KF(N/A)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
TANTOEXE	11/07-11/12	KF(N/A)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
TANTOEXE	11/07-11/12	KF(N/A)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
TANTOEXE	11/07-11/12	KF(N/A)	A/B	√	√			1.Read ECU No.	
TANTOEXE	11/07-11/12	KF(N/A)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
TANTOEXE	11/07-11/12	KF(N/A)	ITC	√	√	√	√	1.Read ECU No.	
TANTOEXE	11/07-11/12	KF(T/C)	EFI	√	√	√	√	1.Read ECU No.	
TANTOEXE	11/07-11/12	KF(T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
TANTOEXE	11/07-11/12	KF(T/C)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
TANTOEXE	11/07-11/12	KF(T/C)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
TANTOEXE	11/07-11/12	KF(T/C)	A/B	√	√			1.Read ECU No.	
TANTOEXE	11/07-11/12	KF(T/C)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
TANTOEXE	11/07-11/12	KF(T/C)	ITC	√	√	√	√	1.Read ECU No.	
TANTOEXE	11/12-12/05	KF(N/A)	EFI	√	√	√	√	1.Read ECU No.	
TANTOEXE	11/12-12/05	KF(N/A)	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
TANTOEXE	11/12-12/05	KF(N/A)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
TANTOEXE	11/12-12/05	KF(N/A)	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
TANTOEXE	11/12-12/05	KF(N/A)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
TANTOEXE	11/12-12/05	KF(N/A)	A/B	✓	✓			1.Read ECU No.	
TANTOEXE	11/12-12/05	KF(N/A)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
TANTOEXE	11/12-12/05	KF(N/A)	ITC	✓	✓	✓	✓	1.Read ECU No.	
TANTOEXE	11/12-12/05	KF(T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
TANTOEXE	11/12-12/05	KF(T/C)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
TANTOEXE	11/12-12/05	KF(T/C)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
TANTOEXE	11/12-12/05	KF(T/C)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
TANTOEXE	11/12-12/05	KF(T/C)	A/B	√	√			1.Read ECU No.	
TANTOEXE	11/12-12/05	KF(T/C)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
TANTOEXE	11/12-12/05	KF(T/C)	ITC	√	√	√	√	1.Read ECU No.	
TANTOEXE	12/05-	KF(N/A,T/C)	EFI	√	√	√	√	1.Read ECU No.	
TANTOEXE	12/05-	KF(N/A,T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
TANTOEXE	12/05-	KF(N/A,T/C)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
TANTOEXE	12/05-	KF(N/A,T/C)	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
TANTOEXE	12/05-	KF(N/A,T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
TANTOEXE	12/05-	KF(N/A,T/C)	A/B	✓	✓			1.Read ECU No.	
TANTOEXE	12/05-	KF(N/A,T/C)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
TANTOEXE	12/05-	KF(N/A,T/C)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Tanto	03/11-05/06	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	03/11-05/06	EF-DET	AT	✓	✓	✓		1.Read ECU No.	
Tanto	03/11-05/06	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	03/11-05/06	EF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Tanto	03/11-05/06	EF-DET	A/B	✓	✓			1.Read ECU No.	
Tanto	03/11-05/06	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	03/11-05/06	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Tanto	03/11-05/06	EF-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Tanto	03/11-05/06	EF-VE	A/B	✓	✓			1.Read ECU No.	
Tanto	05/06-07/12	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	05/06-07/12	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Tanto	05/06-07/12	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Tanto	05/06-07/12	EF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	05/06-07/12	EF-DET	A/B	✓	✓			1.Read ECU No.	
Tanto	05/06-07/12	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Tanto	05/06-07/12	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	05/06-07/12	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Tanto	05/06-07/12	EF-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Tanto	05/06-07/12	EF-VE	A/B	✓	✓			1.Read ECU No.	
Tanto	05/06-07/12	EF-VE	KFS	✓	✓	✓		1.Read ECU No.	
Tanto	05/06-07/12	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	05/06-07/12	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Tanto	05/06-07/12	KF-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	05/06-07/12	KF-VE	A/B	√	√			1.Read ECU No.	
Tanto	05/06-07/12	KF-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Tanto	07/12-09/12	KF-DET	EFI	√	√	√	√	1.Read ECU No.	
Tanto	07/12-09/12	KF-DET	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	07/12-09/12	KF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Tanto	07/12-09/12	KF-DET	EPS	√	√	√		1.Read ECU No.	
Tanto	07/12-09/12	KF-DET	A/B	√	√			1.Read ECU No.	
Tanto	07/12-09/12	KF-DET	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	07/12-09/12	KF-DET	ITC	✓	✓	✓	✓	1.Read ECU No.	
Tanto	07/12-09/12	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	07/12-09/12	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	07/12-09/12	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Tanto	07/12-09/12	KF-VE	EPS	✓	✓	✓		1.Read ECU No.	
Tanto	07/12-09/12	KF-VE	A/B	✓	✓			1.Read ECU No.	
Tanto	07/12-09/12	KF-VE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	07/12-09/12	KF-VE	ITC	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	09/12-10/10	KF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	09/12-10/10	KF-DET	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	09/12-10/10	KF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Tanto	09/12-10/10	KF-DET	EPS	✓	✓	✓		1.Read ECU No.	
Tanto	09/12-10/10	KF-DET	A/B	✓	✓			1.Read ECU No.	
Tanto	09/12-10/10	KF-DET	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	09/12-10/10	KF-DET	ITC	✓	✓	✓	✓	1.Read ECU No.	
Tanto	09/12-10/10	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	09/12-10/10	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	09/12-10/10	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Tanto	09/12-10/10	KF-VE	EPS	✓	✓	✓		1.Read ECU No.	
Tanto	09/12-10/10	KF-VE	A/B	✓	✓			1.Read ECU No.	
Tanto	09/12-10/10	KF-VE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	09/12-10/10	KF-VE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Tanto	10/10-11/06	KF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	10/10-11/06	KF-DET	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	10/10-11/06	KF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Tanto	10/10-11/06	KF-DET	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
Tanto	10/10-11/06	KF-DET	A/B	✓	✓			1.Read ECU No.	
Tanto	10/10-11/06	KF-DET	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Tanto	10/10-11/06	KF-DET	ITC	✓	✓	✓	✓	1.Read ECU No.	
Tanto	10/10-11/06	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	10/10-11/06	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	10/10-11/06	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	10/10-11/06	KF-VE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
Tanto	10/10-11/06	KF-VE	A/B	√	√			1.Read ECU No.	
Tanto	10/10-11/06	KF-VE	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	10/10-11/06	KF-VE	ITC	√	√	√	√	1.Read ECU No.	
Tanto	11/06-11/12	KF(N/A)	EFI	√	√	√	√	1.Read ECU No.	
Tanto	11/06-11/12	KF(N/A)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	11/06-11/12	KF(N/A)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	11/06-11/12	KF(N/A)	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
Tanto	11/06-11/12	KF(N/A)	A/B	✓	✓			1.Read ECU No.	
Tanto	11/06-11/12	KF(N/A)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	11/06-11/12	KF(N/A)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Tanto	11/06-11/12	KF(T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	11/06-11/12	KF(T/C)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	11/06-11/12	KF(T/C)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	11/06-11/12	KF(T/C)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*) 3.Read ECU No.	
Tanto	11/06-11/12	KF(T/C)	A/B	√	√			1.Read ECU No.	
Tanto	11/06-11/12	KF(T/C)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	11/06-11/12	KF(T/C)	ITC	√	√	√	√	1.Read ECU No.	
Tanto	11/12-12/05	KF(N/A)	EFI	√	√	√	√	1.Read ECU No.	
Tanto	11/12-12/05	KF(N/A)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	11/12-12/05	KF(N/A)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	11/12-12/05	KF(N/A)	EPS	✓	✓	✓		1.Read ECU No.	
Tanto	11/12-12/05	KF(N/A)	ABS/VSCA	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
Tanto	11/12-12/05	KF(N/A)	/B	✓	✓			1.Read ECU No.	
Tanto	11/12-12/05	KF(N/A)	KFSITC	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Tanto	11/12-12/05	KF(N/A)		✓	✓	✓	✓	1.Read ECU No.	
Tanto	11/12-12/05	KF(T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	11/12-12/05	KF(T/C)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECU Learning Initializing	
Tanto	11/12-12/05	KF(T/C)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	11/12-12/05	KF(T/C)	EPS	√	√	√		1.Read ECU No.	
Tanto	11/12-12/05	KF(T/C)	A/BKFSITC	√	√			1.Read ECU No.	
Tanto	11/12-12/05	KF(T/C)		√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	11/12-12/05	KF(T/C)		√	√	√	√	1.Read ECU No.	
Tanto	12/05-13/09	KF(N/A,T/C)	EFI	√	√	√	√	1.Read ECU No.	
Tanto	12/05-13/09	KF(N/A,T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Tanto	12/05-13/09	KF(N/A,T/C)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	12/05-13/09	KF(N/A,T/C)	EPS	✓	✓	✓		1.Read ECU No.	
Tanto	12/05-13/09	KF(N/A,T/C)	ABS/VSCA	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
Tanto	12/05-13/09	KF(N/A,T/C)	/B	✓	✓			1.Read ECU No.	
Tanto	12/05-13/09	KF(N/A,T/C)	KFSITC	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Tanto	12/05-13/09	KF(N/A,T/C)		✓	✓	✓	✓	1.Read ECU No.	
Tanto	13/09-	KF(N/A,T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Tanto	13/09-	KF(N/A,T/C)	CVT	✓	✓	✓	✓	1.CVT ECULearning Initializing 2.Read ECU No.	
Tanto	13/09-	KF(N/A,T/C)	eco IDLE	✓	✓	✓	✓	1.Eco-Run ECU Initialization Learning 2.Delete and input Starter Working Times	
Tanto	13/09-	KF(N/A,T/C)	EPS	✓	✓	✓		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Tanto	13/09-	KF(N/A,T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Tanto	13/09-	KF(N/A,T/C)	A/B	✓	✓		✓	1.Read ECU No.	
Tanto	13/09-	KF(N/A,T/C)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Tanto	13/09-	KF(N/A,T/C)	Roof	✓	✓	✓	✓	1.Read ECU No. 2.Roof ECU Initialization	
Tanto	13/09-	KF(N/A,T/C)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Tanto	13/09-	KF(N/A,T/C)	Meter	✓	✓	✓	✓	1.Read ECU No. 2.Instrument panel standard initialization	
Tanto	13/09-	KF(N/A,T/C)	PCB	✓	✓	✓	✓	1.Read ECU No. 2.Laser radar optical axle adjustment	
Tanto	13/09-	KF(N/A,T/C)	Automati c leveling	✓	✓	✓	✓	1.Read ECU No.	
Tanto	13/09-	KF(N/A,T/C)	PSD-RH	✓	✓	✓	✓	1.Read ECU No.	
Tanto	13/09-	KF(N/A,T/C)	PSD-RL	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Terios	00/05-05/12	K3-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Terios	00/05-05/12	K3-VE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Terios	00/05-05/12	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Terios	00/05-05/12	K3-VE	EPS	✓	✓	✓		1.Read ECU No. 2.Torque sensor zero point adjustment	
Terios	00/05-05/12	K3-VE	A/B	✓	✓			1.Read ECU No.	
Terios	00/05-05/12	K3-VET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Terios	00/05-05/12	K3-VET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Terios	00/05-05/12	K3-VET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Terios	00/05-05/12	K3-VET	EPS	✓	✓	✓		1.Read ECU No. 2.Torque sensor zero point adjustment	
Terios	00/05-05/12	K3-VET	A/B	✓	✓			1.Read ECU No.	
Terios Kid	10/07-	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Terios Kid	10/07-	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Terios Kid	10/07-	EF-DET	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Terios Kid	10/07-	EF-DET	A/B	√	√			1.Read ECU No.	
Terios Kid	10/07-	EF-DET	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Terios Kid	10/07-	EF-DET							
Terios Kid	10/07-	EF-DET							
Terios Kid/Lucia	00/11-01/11	EF-DEM	EFI	√	√	√		1.Read ECU No.	
Terios Kid/Lucia	00/11-01/11	EF-DEM	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Terios Kid/Lucia	00/11-01/11	EF-DEM	A/B	√	√			1.Read ECU No.	
Terios Kid/Lucia	00/11-01/11	EF-DEM	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Terios Kid/Lucia	00/11-01/11	EF-DET	EFI	√	√	√		1.Read ECU No.	
Terios Kid/Lucia	00/11-01/11	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Terios Kid/Lucia	00/11-01/11	EF-DET	A/B	√	√			1.Read ECU No.	
Terios Kid/Lucia	00/11-01/11	EF-DET	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Terios Kid/Lucia	01/11-10/07	EF-DEM	EFI	✓	✓	✓	✓	1.Read ECU No.	
Terios Kid/Lucia	01/11-10/07	EF-DEM	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Terios Kid/Lucia	01/11-10/07	EF-DEM	EPS	✓	✓	✓		1.Read ECU No. 2.Torque sensor zero point adjustment	
Terios Kid/Lucia	01/11-10/07	EF-DEM	A/B	✓	✓			1.Read ECU No.	
Terios Kid/Lucia	01/11-10/07	EF-DEM	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Terios Kid/Lucia	01/11-10/07	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Terios Kid/Lucia	01/11-10/07	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Terios Kid/Lucia	01/11-10/07	EF-DET	EPS	✓	✓	✓		1.Read ECU No. 2.Torque sensor zero point adjustment	
Terios Kid/Lucia	01/11-10/07	EF-DET	A/B	✓	✓			1.Read ECU No.	
Terios Kid/Lucia	01/11-10/07	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Naked	00/10-01/06	EF-DET(Mechannism AT)	EFI	✓	✓	✓		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Naked	00/10-01/06	EF-DET(Mechannism AT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Naked	00/10-01/06	EF-DET(Mechannism AT)	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Naked	00/10-01/06	EF-DET(Mechannism AT)	A/B	√	√			1.Read ECU No.	
Naked	00/10-01/06	EF-DET(Mechannism AT)	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Naked	00/10-01/06	EF-DET(Electrical Control AT)	EFI	√	√	√	√	1.Read ECU No.	
Naked	00/10-01/06	EF-DET(Electrical Control AT)	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Naked	00/10-01/06	EF-DET(Electrical Control AT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Naked	00/10-01/06	EF-DET(Electrical Control AT)	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Naked	00/10-01/06	EF-DET(Electrical Control AT)	A/B	√	√			1.Read ECU No.	
Naked	00/10-01/06	EF-DET(Electrical Control AT)	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Naked	00/10-01/06	EF-VE	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Naked	00/10-01/06	EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Naked	00/10-01/06	EF-VE	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Naked	00/10-01/06	EF-VE	A/B	√	√			1.Read ECU No.	
Naked	00/10-01/06	EF-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Naked	01/06-02/12	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
Naked	01/06-02/12	EF-DET	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Naked	01/06-02/12	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Naked	01/06-02/12	EF-DET	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Naked	01/06-02/12	EF-DET	A/B	√	√			1.Read ECU No.	
Naked	01/06-02/12	EF-DET	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Naked	01/06-02/12	EF-VE	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Naked	01/06-02/12	EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Naked	01/06-02/12	EF-VE	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
Naked	01/06-02/12	EF-VE	A/B	√	√			1.Read ECU No.	
Naked	01/06-02/12	EF-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Naked	02/12-04/04	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
Naked	02/12-04/04	EF-DET	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Naked	02/12-04/04	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Naked	02/12-04/04	EF-DET	DVS	√	√	√	√	1.Read ECU No.	
Naked	02/12-04/04	EF-DET	A/B	√	√			1.Read ECU No.	
Naked	02/12-04/04	EF-DET	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Naked	02/12-04/04	EF-VE	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Naked	02/12-04/04	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Naked	02/12-04/04	EF-VE	DVS	✓	✓	✓	✓	1.Read ECU No. 2.DVS Bleeding	
Naked	02/12-04/04	EF-VE	A/B	✓	✓			1.Read ECU No.	
Naked	02/12-04/04	EF-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/01-01/05	EF-DET	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/01-01/05	EF-DET	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/01-01/05	EF-SE	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-SE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/01-01/05	EF-SE	EPS	✓	✓	✓		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	01/01-01/05	EF-SE	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-VE	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/01-01/05	EF-VE	EPS	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-VE	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/01-01/05	EF-VN	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/01-01/05	EF-VN	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-DET	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/05-01/09	EF-DET	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	01/05-01/09	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/05-01/09	EF-SE(Truck)	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-SE(Truck)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/05-01/09	EF-SE(Truck)	EPS	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-SE(Truck)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-SE(Cargo, Atrai)	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-SE(Cargo, Atrai)	ABS	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-SE(Cargo, Atrai)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-VE(Truck)	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-VE(Truck)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/05-01/09	EF-VE(Truck)	EPS	✓	✓	✓		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	01/05-01/09	EF-VE(Truck)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-VE(Cargo, Atrai)	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-VE(Cargo, Atrai)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/05-01/09	EF-VE(Cargo, Atrai)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-VE(Cargo, Atrai)	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/05-01/09	EF-VN	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/05-01/09	EF-VN	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-DET	EFI	✓	✓	✓		1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/09-01/10	EF-DET	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	01/09-01/10	EF-SE(Truck)	EFI	√	√	√		1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-SE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/09-01/10	EF-SE(Truck)	EPS	√	√	√		1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-SE(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-SE(Cargo, Atrai)	EFI	√	√	√		1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-SE(Cargo, Atrai)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/09-01/10	EF-SE(Cargo, Atrai)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-VE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-VE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/09-01/10	EF-VE(Truck)	EPS	√	√	√		1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-VE(Truck)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	01/09-01/10	EF-VE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-VE(Cargo, Atrai)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/09-01/10	EF-VE(Cargo, Atrai)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-VE(Cargo, Atrai)	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/09-01/10	EF-VN	EFI	√	√	√		1.Read ECU No.	
Hijet/Atrai	01/09-01/10	EF-VN	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/10-02/01	EF-DET	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-DET	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/10-02/01	EF-SE(Truck)	EFI	√	√	√		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	01/10-02/01	EF-SE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/10-02/01	EF-SE(Truck)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	01/10-02/01	EF-SE(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-SE(Cargo, Atrai)	EFI	√	√	√		1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-SE(Cargo, Atrai)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/10-02/01	EF-SE(Cargo, Atrai)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-VE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-VE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/10-02/01	EF-VE(Truck)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	01/10-02/01	EF-VE(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-VE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	01/10-02/01	EF-VE(Cargo, Atrai)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	01/10-02/01	EF-VE(Cargo, Atrai)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-VE(Cargo, Atrai)	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	01/10-02/01	EF-VN	EFI	√	√	√		1.Read ECU No.	
Hijet/Atrai	01/10-02/01	EF-VN	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-DET	AT	√	√	√		1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	02/01-04/12	EF-DET	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-DET	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	02/01-04/12	EF-SE(Truck)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	02/01-04/12	EF-SE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	02/01-04/12	EF-SE(Truck)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	02/01-04/12	EF-SE(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-SE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-SE(Cargo, Atrai)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	02/01-04/12	EF-SE(Cargo, Atrai)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-VE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-VE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	02/01-04/12	EF-VE(Truck)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	02/01-04/12	EF-VE(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-VE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	02/01-04/12	EF-VE(Cargo, Atrai)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	02/01-04/12	EF-VE(Cargo, Atrai)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-VE(Cargo, Atrai)	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Hijet/Atrai	02/01-04/12	EF-VN	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	02/01-04/12	EF-VN	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-DET(A/T)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-DET(A/T)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	04/12-10/08	EF-DET(A/T)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-DET(M/T)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-DET(M/T)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	04/12-10/08	EF-DET(M/T)	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	04/12-10/08	EF-SE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-SE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	04/12-10/08	EF-SE(Truck)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	04/12-10/08	EF-SE(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-SE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-SE(Cargo, Atrai)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	04/12-10/08	EF-SE(Cargo, Atrai)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->A/T)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->A/T)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->A/T)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->A/T)	A/B	√	√			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->M/T)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->M/T)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->M/T)	EPS	✓	✓	✓		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	04/12-10/08	EF-VE(Truck-->M/T)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(Cargo-->A/T)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(Cargo-->A/T)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	04/12-10/08	EF-VE(Cargo-->A/T)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(Cargo-->M/T)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(Cargo-->M/T)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	04/12-10/08	EF-VE(Cargo-->M/T)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VE(HV)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	04/12-10/08	EF-VE(HV)	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Hijet/Atrai	04/12-10/08	EF-VE(HV)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	04/12-10/08	EF-VE(HV)	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Hijet/Atrai	04/12-10/08	EF-VE(HV)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VN	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	04/12-10/08	EF-VN	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	04/12-10/08	EF-VN	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	10/08-11/11	KF-DET	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	10/08-11/11	KF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	10/08-11/11	KF-DET	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	10/08-11/11	KF-VE(Truck)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	10/08-11/11	KF-VE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	10/08-11/11	KF-VE(Truck)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	10/08-11/11	KF-VE(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	10/08-11/11	KF-VE(Cargo)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	10/08-11/11	KF-VE(Cargo)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	10/08-11/11	KF-VE(Cargo)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	11/11-13/04	KF(N/A)(Truck)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	11/11-13/04	KF(N/A)(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	11/11-13/04	KF(N/A)(Truck)	EPS	√	√	√		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	11/11-13/04	KF(N/A)(Truck)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	11/11-13/04	KF(N/A)(Cargo)	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	11/11-13/04	KF(N/A)(Cargo)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	11/11-13/04	KF(N/A)(Cargo)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	11/11-13/04	KF(T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	11/11-13/04	KF(T/C)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Hijet/Atrai	11/11-13/04	KF(T/C)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	13/04-	KF(N/A)(Truck)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	13/04-	KF(N/A)(Truck)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	13/04-	KF(N/A)(Truck)	EPS	✓	✓	✓		1.Read ECU No. 2.Torque sensor zero point adjustment	
Hijet/Atrai	13/04-	KF(N/A)(Truck)	A/B	✓	✓			1.Read ECU No.	
Hijet/Atrai	13/04-	KF(N/A)(Cargo)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Hijet/Atrai	13/04-	KF(N/A)(Cargo)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Hijet/Atrai	13/04-	KF(N/A)(Cargo)	A/B	√	√			1.Read ECU No.	
Hijet/Atrai	13/04-	KF(T/C)	EFI	√	√	√	√	1.Read ECU No.	
Hijet/Atrai	13/04-	KF(T/C)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Hijet/Atrai	13/04-	KF(T/C)	A/B	√	√			1.Read ECU No.	
BEGO	06/01-10/07	3SZ-VE	EFI	√	√	√	√	1.Read ECU No.	
BEGO	06/01-10/07	3SZ-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
BEGO	06/01-10/07	3SZ-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
BEGO	06/01-10/07	3SZ-VE	VSC	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
BEGO	06/01-10/07	3SZ-VE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
BEGO	06/01-10/07	3SZ-VE	A/B	√	√			1.Read ECU No.	
BEGO	06/01-10/07	3SZ-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
BEGO	10/07-13/02	3SZ-VE	EFI	√	√	√	√	1.Read ECU No.	
BEGO	10/07-13/02	3SZ-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
BEGO	10/07-13/02	3SZ-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
BEGO	10/07-13/02	3SZ-VE	VSC	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
BEGO	10/07-13/02	3SZ-VE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
BEGO	10/07-13/02	3SZ-VE	A/B	√	√			1.Read ECU No.	
BEGO	10/07-13/02	3SZ-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
BEGO	13/02-	3SZ-VE	EFI	√	√	√	√	1.Read ECU No.	
BEGO	13/02-	3SZ-VE	A/T	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
BEGO	13/02-	3SZ-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
BEGO	13/02-	3SZ-VE	VSC	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
BEGO	13/02-	3SZ-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
BEGO	13/02-	3SZ-VE	A/B	✓	✓			1.Read ECU No.	
BEGO	13/02-	3SZ-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Boon	04/05-05/11	1KR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	04/05-05/11	1KR-FE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Boon	04/05-05/11	1KR-FE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Boon	04/05-05/11	1KR-FE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Boon	04/05-05/11	1KR-FE	A/B	✓	✓			1.Read ECU No.	
Boon	04/05-05/11	1KR-FE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Boon	04/05-05/11	K3-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	04/05-05/11	K3-VE	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	04/05-05/11	K3-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Boon	04/05-05/11	K3-VE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Boon	04/05-05/11	K3-VE	A/B	✓	✓			1.Read ECU No.	
Boon	04/05-05/11	K3-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Boon	05/11-10/02	1KR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	05/11-10/02	1KR-FE	AT	✓	✓	✓		1.Read ECU No.	
Boon	05/11-10/02	1KR-FE	ABS	✓	✓	✓	✓	1.Read ECU No.	
Boon	05/11-10/02	1KR-FE	EPS	✓	✓	✓		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Boon	05/11-10/02	1KR-FE	A/B	✓	✓			1.Read ECU No.	
Boon	05/11-10/02	1KR-FE	KFS	✓	✓	✓		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	05/11-10/02	K3-VE	EFI	√	√	√	√	1.Read ECU No.	
Boon	05/11-10/02	K3-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
Boon	05/11-10/02	K3-VE	ABS	√	√	√	√	1.Read ECU No.	
Boon	05/11-10/02	K3-VE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Boon	05/11-10/02	K3-VE	A/B	√	√			1.Read ECU No.	
Boon	05/11-10/02	K3-VE	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Boon	05/11-10/02	KJ-VET	EFI	√	√	√	√	1.Read ECU No.	
Boon	05/11-10/02	KJ-VET	ABS	√	√	√	√	1.Read ECU No. 2.A/T Learning Value Initialization	
Boon	05/11-10/02	KJ-VET	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
Boon	05/11-10/02	KJ-VET	A/B	√	√			1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	10/02-11/05	1KR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	10/02-11/05	1KR-FE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Boon	10/02-11/05	1KR-FE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Boon	10/02-11/05	1KR-FE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Boon	10/02-11/05	1KR-FE	A/B	✓	✓			1.Read ECU No.	
Boon	10/02-11/05	1KR-FE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Boon	10/02-11/05	1KR-FE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Boon	10/02-11/05	1KR-FE	Meter	✓	✓	✓			

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	10/02-11/05	1NR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	10/02-11/05	1NR-FE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Boon	10/02-11/05	1NR-FE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Boon	10/02-11/05	1NR-FE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Boon	10/02-11/05	1NR-FE	A/B	✓	✓			1.Read ECU No.	
Boon	10/02-11/05	1NR-FE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Boon	10/02-11/05	1NR-FE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Boon	10/02-11/05	1NR-FE	Meter	✓	✓	✓			

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	11/05-12/06	1KR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	11/05-12/06	1KR-FE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Boon	11/05-12/06	1KR-FE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Boon	11/05-12/06	1KR-FE	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Boon	11/05-12/06	1KR-FE	A/B	✓	✓			1.Read ECU No.	
Boon	11/05-12/06	1KR-FE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Boon	11/05-12/06	1KR-FE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Boon	11/05-12/06	1KR-FE	Meter	✓	✓	✓			

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	11/05-12/06	1NR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	11/05-12/06	1NR-FE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Boon	11/05-12/06	1NR-FE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Boon	11/05-12/06	1NR-FE	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Boon	11/05-12/06	1NR-FE	A/B	✓	✓			1.Read ECU No.	
Boon	11/05-12/06	1NR-FE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Boon	11/05-12/06	1NR-FE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Boon	11/05-12/06	1NR-FE	Meter	✓	✓	✓			

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	12/06-14/04	1KR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	12/06-14/04	1KR-FE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Boon	12/06-14/04	1KR-FE	eco IDLE	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Boon	12/06-14/04	1KR-FE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Boon	12/06-14/04	1KR-FE	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
Boon	12/06-14/04	1KR-FE	A/B	✓	✓			1.Read ECU No.	
Boon	12/06-14/04	1KR-FE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	12/06-14/04	1KR-FE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Boon	12/06-14/04	1KR-FE	Meter	✓	✓	✓	✓	1.Read ECU No. 2.Instrument panel standard initialization	
Boon	14/04-	1KR-FE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon	14/04-	1KR-FE	CVT	✓	✓	✓	✓	1.CVT ECULearning Initializing 2.Read ECU No.	
Boon	14/04-	1KR-FE	eco IDLE	✓	✓	✓	✓	1.Eco-Run ECU Initialization Learning 2.Delete and input Starter Working Times	
Boon	14/04-	1KR-FE	EPS	✓	✓	✓		1.Read ECU No.	
Boon	14/04-	1KR-FE	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Boon	14/04-	1KR-FE	A/B	✓	✓		✓	1.Read ECU No.	
Boon	14/04-	1KR-FE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Boon	14/04-	1KR-FE	ITC	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon	14/04-	1KR-FE	Meter	✓	✓	✓	✓		
Boon	14/04-	1KR-FE	Automatic leveling	✓	✓	✓	✓	1.Read ECU No.	
Boon Luminas	08/12-	3SZ-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Boon Luminas	08/12-	3SZ-VE	A/T	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Boon Luminas	08/12-	3SZ-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECU Learning Initializing	
Boon Luminas	08/12-	3SZ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Boon Luminas	08/12-	3SZ-VE	VSC	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 4.3rd bleeding	
Boon Luminas	08/12-	3SZ-VE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Boon Luminas	08/12-	3SZ-VE	A/B	✓	✓			1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Boon Luminas	08/12-	3SZ-VE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Boon Luminas	08/12-	3SZ-VE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Max	01/10-	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Max	01/10-	EF-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Max	01/10-	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Max	01/10-	EF-DET	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Max	01/10-	EF-DET	A/B	✓	✓			1.Read ECU No.	
Max	01/10-	EF-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Max	01/10-	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Max	01/10-	EF-VE	CVT	✓	✓	✓		1.Read ECU No.	
Max	01/10-	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Max	01/10-	EF-VE	DVS	✓	✓	✓		1.Read ECU No. 2.DVS Bleeding	
Max	01/10-	EF-VE	A/B	✓	✓			1.Read ECU No.	
Max	01/10-	EF-VE	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Max	01/10-	JB-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	
Max	01/10-	JB-DET	AT	✓	✓	✓		1.Read ECU No. 2.A/T Learning Value Initialization	
Max	01/10-	JB-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Max	01/10-	JB-DET	A/B	✓	✓			1.Read ECU No.	
Max	01/10-	JB-DET	KFS	✓	✓	✓		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Max	01/10-	JB-DET	4wd	✓	✓	✓		1.Read ECU No.	
Mirae:S	11/09-13/07	KF(N/A)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mirae:S	11/09-13/07	KF(N/A)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Mirae:S	11/09-13/07	KF(N/A)	eco IDLE	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Mirae:S	11/09-13/07	KF(N/A)	EPS	✓	✓	✓		1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mirae:S	11/09-13/07	KF(N/A)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Mirae:S	11/09-13/07	KF(N/A)	A/B	✓	✓			1.Read ECU No.	
Mirae:S	11/09-13/07	KF(N/A)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Mirae:S	11/09-13/07	KF(N/A)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Mirae:S	11/09-13/07	KF(N/A)	Meter	✓	✓	✓			
Mirae:S	11/09-13/07	KF(N/A)	PCB	✓	✓	✓	✓	1.Read ECU No. 2.Laser radar optical axle adjustment	
Mirae:S	13/07-	KF(N/A)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mirae:S	13/07-	KF(N/A)	CVT	✓	✓	✓	✓	1.CVT ECULearning Initializing 2.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mirae:S	13/07-	KF(N/A)	eco IDLE	√	√	√	√	1.Eco-Run ECU Initialization Learning 2.Delete and input Starter Working Times	
Mirae:S	13/07-	KF(N/A)	EPS	√	√	√		1.Read ECU No.	
Mirae:S	13/07-	KF(N/A)	ABS/VSC	√	√	√	√	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Mirae:S	13/07-	KF(N/A)	A/B	√	√		√	1.Read ECU No.	
Mirae:S	13/07-	KF(N/A)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Mirae:S	13/07-	KF(N/A)	ITC	√	√	√	√	1.Read ECU No.	
Mirae:S	13/07-	KF(N/A)	Meter	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Mirae:S	13/07-	KF(N/A)	PCB	√	√	√	√	1.Read ECU No. 2.Laser radar optical axle adjustment	
Mira Cocoa	09/08-11/06	KF-VE	EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira Cocoa	09/08-11/06	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira Cocoa	09/08-11/06	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira Cocoa	09/08-11/06	KF-VE	EPS	✓	✓	✓	✓	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Mira Cocoa	09/08-11/06	KF-VE	A/B	✓	✓			1.Read ECU No.	
Mira Cocoa	09/08-11/06	KF-VE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Mira Cocoa	09/08-11/06	KF-VE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Mira Cocoa	11/06-12/04	KF(2WD)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira Cocoa	11/06-12/04	KF(2WD)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira Cocoa	11/06-12/04	KF(2WD)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding 1.Torque sensor zero point adjustment(*) 2.Read ECU No. 1.Read ECU No.	
Mira Cocoa	11/06-12/04	KF(2WD)	EPS	✓	✓	✓	✓		
Mira Cocoa	11/06-12/04	KF(2WD)	A/B	✓	✓				
Mira Cocoa	11/06-12/04	KF(2WD)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Mira Cocoa	11/06-12/04	KF(2WD)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Mira Cocoa	11/06-12/04	KF(4WD)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira Cocoa	11/06-12/04	KF(4WD)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira Cocoa	11/06-12/04	KF(4WD)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira Cocoa	11/06-12/04	KF(4WD)	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Mira Cocoa	11/06-12/04	KF(4WD)	A/B	√	√			1.Read ECU No.	
Mira Cocoa	11/06-12/04	KF(4WD)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Mira Cocoa	11/06-12/04	KF(4WD)	ITC	√	√	√	√	1.Read ECU No.	
Mira Cocoa	12/04-14/08	KF	EFI	√	√	√	√	1.Read ECU No.	
Mira Cocoa	12/04-14/08	KF	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Mira Cocoa	12/04-14/08	KF	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira Cocoa	12/04-14/08	KF	EPS	√	√	√		1.Read ECU No.	
Mira Cocoa	12/04-14/08	KF	ABS/VSC	√	√	√	√	1.Read ECU No. 2.2nd bleeding	
Mira Cocoa	12/04-14/08	KF	A/B	√	√			1.Read ECU No.	
Mira Cocoa	12/04-14/08	KF	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Mira Cocoa	12/04-14/08	KF	ITC	√	√	√	√	1.Read ECU No.	
Cocoa	14/08-	KF(N/A)	EFI	√	√	√	√	1.Read ECU No.	
Mira Cocoa	14/08-	KF(N/A)	CVT	√	√	√	√	1.CVT ECULearning Initializing 2.Read ECU No.	
Mira Cocoa	14/08-	KF(N/A)	eco IDLE	√	√	√	√	1.Eco-Run ECU Initialization Learning 2.Delete and input Starter Working Times	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira Cocoa	14/08-	KF(N/A)	EPS	✓	✓	✓		1.Read ECU No.	
Mira Cocoa	14/08-	KF(N/A)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Mira Cocoa	14/08-	KF(N/A)	A/B	✓	✓		✓	1.Read ECU No.	
Mira Cocoa	14/08-	KF(N/A)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Mira Cocoa	14/08-	KF(N/A)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Mira Cocoa	14/08-	KF(N/A)	Meter	✓	✓	✓	✓	1.Read ECU No. 2.Instrument panel standard initialization	
Mira Cocoa	14/08-	KF(N/A)	Automati c leveling	✓	✓	✓	✓	1.Read ECU No.	
Mira Gino	02/08-04/12	EF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira Gino	02/08-04/12	EF-DET	AT	✓	✓	✓		1.Read ECU No.	
Mira Gino	02/08-04/12	EF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Mira Gino	02/08-04/12	EF-DET	A/B	✓	✓			1.Read ECU No.	
Mira Gino	02/08-04/12	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira Gino	02/08-04/12	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Mira Gino	02/08-04/12	EF-VE	A/B	✓	✓			1.Read ECU No.	
Mira Gino	02/08-04/12	EJ-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira Gino	02/08-04/12	EJ-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	
Mira Gino	02/08-04/12	EJ-VE	A/B	✓	✓			1.Read ECU No.	
Mira Gino	04/12-08/12	EF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Mira Gino	04/12-08/12	EF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Mira Gino	04/12-08/12	EF-VE	A/B	√	√			1.Read ECU No.	
Mira(CNG)	08/12-	KF-VN	EFI	√	√	√	√	1.Read ECU No.	
Mira(CNG)	08/12-	KF-VN	EPS	√	√	√	√	1.Torque sensor zero point adjustment(*) 2.Read ECU No.	
Mira(CNG)	08/12-	KF-VN	A/B	√	√			1.Read ECU No.	
Move Conte	08/08-09/12	KF-DET	EFI	√	√	√	√	1.Read ECU No.	
Move Conte	08/08-09/12	KF-DET	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move Conte	08/08-09/12	KF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move Conte	08/08-09/12	KF-DET	EPS	√	√	√		1.Read ECU No.	
Move Conte	08/08-09/12	KF-DET	A/B	√	√			1.Read ECU No.	
Move Conte	08/08-09/12	KF-DET	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Move Conte	08/08-09/12	KF-DET	ITC	√	√	√	√	1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	08/08-09/12	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	08/08-09/12	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move Conte	08/08-09/12	KF-VE	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move Conte	08/08-09/12	KF-VE	EPS	✓	✓	✓		1.Read ECU No.	
Move Conte	08/08-09/12	KF-VE	A/B	✓	✓			1.Read ECU No.	
Move Conte	08/08-09/12	KF-VE	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move Conte	08/08-09/12	KF-VE	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	09/12-11/06	KF-DET	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu V10.09 Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	09/12-11/06	KF-DET	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move Conte	09/12-11/06	KF-DET	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move Conte	09/12-11/06	KF-DET	EPS	✓	✓	✓		1.Read ECU No.	
Move Conte	09/12-11/06	KF-DET	A/B	✓	✓			1.Read ECU No.	
Move Conte	09/12-11/06	KF-DET	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move Conte	09/12-11/06	KF-DET	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	09/12-11/06	KF-VE	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	09/12-11/06	KF-VE	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	09/12-11/06	KF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move Conte	09/12-11/06	KF-VE	EPS	√	√	√		1.Read ECU No.	
Move Conte	09/12-11/06	KF-VE	A/B	√	√			1.Read ECU No.	
Move Conte	09/12-11/06	KF-VE	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move Conte	09/12-11/06	KF-VE	ITC	√	√	√	√	1.Read ECU No.	
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	EFI	√	√	√	√	1.Read ECU No.	
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	eco IDLE	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	EPS	✓	✓	✓		1.Read ECU No.	
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	A/B	✓	✓			1.Read ECU No.	
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move Conte	11/06-12/04	KF(N/A)(eco, with IDLE)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	11/06-12/04	KF(N/A)(eco, without IDLE)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	11/06-12/04	KF(N/A)(eco, without IDLE)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move Conte	11/06-12/04	KF(N/A)(eco, without IDLE)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move Conte	11/06-12/04	KF(N/A)(eco, without IDLE)	EPS	√	√	√		1.Read ECU No.	
Move Conte	11/06-12/04	KF(N/A)(eco, without IDLE)	A/B	√	√			1.Read ECU No.	
Move Conte	11/06-12/04	KF(N/A)(eco, without IDLE)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move Conte	11/06-12/04	KF(N/A)(eco, without IDLE)	ITC	√	√	√	√	1.Read ECU No.	
Move Conte	11/06-12/04	KF(T/C)	EFI	√	√	√	√	1.Read ECU No.	
Move Conte	11/06-12/04	KF(T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	11/06-12/04	KF(T/C)	EPS	✓	✓	✓		1.Read ECU No.	
Move Conte	11/06-12/04	KF(T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding 3.3rd bleeding	
Move Conte	11/06-12/04	KF(T/C)	A/B	✓	✓			1.Read ECU No.	
Move Conte	11/06-12/04	KF(T/C)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move Conte	11/06-12/04	KF(T/C)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	12/04-12/05	KF(N/A)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	12/04-12/05	KF(N/A)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECU Learning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	12/04-12/05	KF(N/A)	eco IDLE	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move Conte	12/04-12/05	KF(N/A)	EPS	✓	✓	✓		1.Read ECU No.	
Conte	12/04-12/05	KF(N/A)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	12/04-12/05	KF(N/A)	A/B	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	12/04-12/05	KF(N/A)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move Conte	12/04-12/05	KF(N/A)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	12/04-12/05	KF(T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	12/04-12/05	KF(T/C)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	
Move Conte	12/04-12/05	KF(T/C)	ABS	✓	✓	✓	✓	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
Move Conte	12/04-12/05	KF(T/C)	EPS	✓	✓	✓		1.Read ECU No.	
Move Conte	12/04-12/05	KF(T/C)	A/B	✓	✓			1.Read ECU No.	
Move Conte	12/04-12/05	KF(T/C)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move Conte	12/04-12/05	KF(T/C)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	12/05-13/06	KF(N/A,T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	12/05-13/06	KF(N/A,T/C)	CVT	✓	✓	✓		1.Read ECU No. 2.CVT ECULearning Initializing	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: ✓ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	12/05-13/06	KF(N/A,T/C)	eco IDLE	✓	✓	✓	✓	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move Conte	12/05-13/06	KF(N/A,T/C)	EPS	✓	✓	✓		1.Read ECU No.	
Move Conte	12/05-13/06	KF(N/A,T/C)	ABS/VSC	✓	✓	✓	✓	1.Read ECU No. 2.2nd bleeding	
Move Conte	12/05-13/06	KF(N/A,T/C)	A/B	✓	✓			1.Read ECU No.	
Move Conte	12/05-13/06	KF(N/A,T/C)	KFS	✓	✓	✓	✓	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Move Conte	12/05-13/06	KF(N/A,T/C)	ITC	✓	✓	✓	✓	1.Read ECU No.	
Move Conte	13/06-	KF(N/A,T/C)	EFI	✓	✓	✓	✓	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	13/06-	KF(N/A,T/C)	CVT	√	√	√		1.Read ECU No. 2.CVT ECULearning Initializing	
Move Conte	13/06-	KF(N/A,T/C)	eco IDLE	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
Move Conte	13/06-	KF(N/A,T/C)	EPS	√	√	√		1.Read ECU No.	
Move Conte	13/06-	KF(N/A,T/C)	ABS/VSC	√	√	√	√	1.Read ECU No. 2.2nd bleeding	
Move Conte	13/06-	KF(N/A,T/C)	A/B	√	√			1.Read ECU No.	
Move Conte	13/06-	KF(N/A,T/C)	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test6.Repeater communication test	
Move Conte	13/06-	KF(N/A,T/C)	ITC	√	√	√	√	1.Read ECU No.	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
Move Conte	13/06-	KF(N/A,T/C)	Meter	√	√	√	√	1.Read ECU No. 2.Instrument panel standard initialization	
Move Conte	13/06-	KF(N/A,T/C)	Automatic leveling	√	√	√	√	1.Read ECU No.	
MOVELatte	04/08-08/12	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
MOVELatte	04/08-08/12	EF-DET	AT	√	√	√		1.Read ECU No.	
MOVELatte	04/08-08/12	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
MOVELatte	04/08-08/12	EF-DET	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
MOVELatte	04/08-08/12	EF-DET	A/B	√	√			1.Read ECU No.	
MOVELatte	04/08-08/12	EF-VE	EFI	√	√	√	√	1.Read ECU No.	
MOVELatte	04/08-08/12	EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding 3.2nd bleeding	
MOVELatte	04/08-08/12	EF-VE	EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	

Daihatsu **V10.09** Diagnostics List(Note:For reference only)

Note: √ This function is supported, × This function is not supported

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Action Test	Special Function	Others
MOVELatte	04/08-08/12	EF-VE	A/B	√	√			1.Read ECU No.	
MOVELatte	04/08-08/12	EF-VE	KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status 3.Antenna connection diagnostic 4.Wireless communication test 5.Intelligent communication test 6.Repeater communication test	
Before M/Y 2000/2001(no KWP Protocol)			EFI	√	√	√	√	1.Read ECU No.	
Before M/Y 2000/2001(no KWP Protocol)			CVT	√	√	√		1.Read ECU No.	
Before M/Y 2000/2001(no KWP Protocol)			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
Before M/Y 2000/2001(no KWP Protocol)			DVS	√	√	√	√	1.Read ECU No.	
Before M/Y 2000/2001(no KWP Protocol)			EPS	√	√	√		1.Read ECU No.	
Before M/Y 2000/2001(no KWP Protocol)			A/B	√	√			1.Read ECU No.	