





JAGUAR V10.11 Diagnostics List (Note:For reference only)

Model	Year	
		S35: Diesel particulate filter differential pressure sensor replacement
		S36: Diesel fueling adaption re-initialization
		S37: Fuel prime routine
		S38: Display injector correction factors
		S39: Purge valve self test
		S40: Yaw rate sensor calibration
		S41: Vent actuators test
		S42: Restraints build mode
		S43: Rest of world - Service interval options
		S44: Speed control alignment
		S45: Control module calibration
		S46: Tire size (rolling circumference)
		S47: Headlamp control module system calibration
		S48: Navigation reset
		S49: Side object detection configuration - Right
		S50: Side object detection configuration - Left
		S51: Dynamic safety belt retract and release - SPMA
		S52: Dynamic safety belt retract and release - SPMB
		S53: Clear module learn data - SPMA
		S54: Clear module learn data - SPMB
		S55: Seat cushion replacement
		S56: DVD region counter reset
		S57: Calibrate dynamic volume control
		S58: Idle speed adjustment
		S59: Idle speed test
		S60: Driver's seat calibration
		S61: Passenger's seat calibration
		S62: Rear seat calibration - Right
		S63: Rear seat calibration - Left
		S64: Tailgate/trunk calibration
		S65: Passenger restraint disable switch
		S66: Mirror personalisation features
		S67: Paddle shift configuration
		S68: Transportation mode
		S69: Fuel pump supply - Enable/disable
		S70: Calibration learn
		S71: Build mode
		S72: Valet mode reset
		S73: Test dual battery system
		S74: Verify secondary battery charging
		S75: Quiescent current control module internal check
		S76: Evaporator and heater test
		S77: Injector valve test
		S78: Speed control internal state
		S79: Air conditioning system adaption reset
		S80: Diesel particulate filter condition (stored values)
		S81: Vehicle reset
		S82: Alarm trigger history
		S83: Side object detection module history
		S84: Side object detection module history
		S85: OBDII readiness tests
		S86: Service history data
		S87: Headlamp and axle sensor calibration
		S88: Lateral accelerometer calibration
		S89: Pressure sensor calibration
		S90: Longitudinal accelerometer calibration
		S91: Parking brake pad replacement - Exit maintenance mode application
		S92: Parking brake activation
		S93: Odometer calibration
		S94: Engine control module unlock application
		S95: Steering angle sensor calibration
		S96: Key programming
		S97: Erase all existing keys
		S98: Verify Keys
		S99: Check all antennas
		S100: Immobiliser Antenna Unit Functionality Check
		S101: Add additional keys
		S102: Replace faulty/lost keys
		S103: Recover programmed keys
		S104: Check passive keys enabled
		S112: Height calibration
		S113: Set/un-set air suspension manufacturing/freeze mode
		S114: Set/un-set air suspension geometry set-up
		S115: Set/un-set air suspension tight tolerance mode (headlamp setting)
		S116: Air suspension inflation
		S117: Air suspension deflation
		S128: Front control display interface module - Graphics update