

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

Ypsilon(2011)	BCM(Body Controller)	VCDFA
	CMM(Collision Mitigation Module)	VCDF
	TCM(Transmission Control Module)	VCDFA
	CTM(Convergence Telematic Module)	VCDA
	AHM(Additional Heater Module)	VCDA
	ECM(Engine Control Module)	VCDFA
	ORC(Occupant Restraint)	VCD
	PAM(Parking Aid Module)	VCD
	IPC(Instrument Panel Cluster)	VCDA
	EPS(Electric Power Steering)	VCDF
	ABS(Anti Lock Brakes)	VCDFA
	HVAC(Heat, Ventilation and A/C)	VCDFA
Flavia(2012)	TIPMCGW(Central Gateway)	VCDFA
	PDM(Passenger Door Module)	VCDA
	AMP(Amplifier)	VCDF
	PCM(Powertrain Control Module)	VCDFA
	HVAC(Heat, Ventilation and A/C)	VCDFA
	ABS(Anti Lock Brakes)	VCDFA
	ORC(Occupant Restraint)	VCDF
	CCN(Instrument Cluster/Cabin Compartment Node)	VCDFA
	HFM(Hands Free Module(cell phone))	VCDA
	SAS(Steering Angle Sensor)	VCD
	DDM(Driver Door Module)	VCDA
	RADIO(RADIO)	VCDF
WCM(Wireless Control)	VCDF	

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

		PTCM(Power Top Control Module)	VCDF
Flavia(2013)		TIPMCGW(Central Gateway)	VCDF
		PDM(Passenger Door Module)	VCDA
		AMP(Amplifier)	VCDF
		PCM(Powertrain Control Module)	VCDF
		HVAC(Heat, Ventilation and A/C)	VCDF
		ABS(Anti Lock Brakes)	VCDF
		ORC(Occupant Restraint)	VCDF
		CCN(Instrument Cluster/Cabin Compartment Node)	VCDF
		HFM(Hands Free Module(cell phone))	VCDA
		SAS(Steering Angle Sensor)	VCD
		DDM(Driver Door Module)	VCDA
		RADIO(RADIO)	VCDF
		WCM(Wireless Control)	VCDF
		PTCM(Power Top Control Module)	VCDF
		ESM(Electronic Shifter)	VCDF
		TCM(Transmission Control Module)	VCDA
		BCM(Body Controller)	VCDF
	ORC(Occupant Restraint)	VCDF	
	TGW(Telematic Gateway Radio)	VCD	
	HVAC(Heat, Ventilation and A/C)	VCDF	
	ICS(Integrated Center Stack)	VCDF	
	TCM(Transmission Control Module)	VCDF	
	ESM(Electronic Shifter)	VCDA	
	AFLS(Adaptive Front Lighting System)	VCDA	

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

Thema(2012)	PDM(Passenger Door Module)	VCDFA
	PCM(Powertrain Control Module)	VCDFA
	DDM(Driver Door Module)	VCDFA
	AMP(Amplifier)	VCD
	PTS(Parktronics)	VCDFA
	ABS(Anti Lock Brakes)	VCDFA
	IPC(Instrument Panel Cluster)	VCDFA
	SCCM(Steering Column Control Module)	VCD
	ITM(Intrusion)	VCDFA
	HSM(Heated Seat Module)	VCDFA
	EPS(Electric Power Steering)	VCDF
	RFH(Radio Frequency Hub)	VCDFA
	MSM(Memory Seat Module)	VCDFA
	DTCM(Drive Train Control Module)	VCDFA
	ACC(Adaptive Cruise Control)	VCDF
	HFM(Hands Free Module(cell phone))	VCD
	BSM(Blind Spot Module)	VCD
	ADCM(Active Damping Control Module)	VCD
	TPM(Tire Pressure Monitor)	VCDF
	BCM(Body Controller)	VCDFA
ORC(Occupant Restraint)	VCDF	
TGW(Telematic Gateway Radio)	VCD	
HVAC(Heat, Ventilation and A/C)	VCDFA	
ICS(Integrated Center Stack)	VCDFA	
TCM(Transmission Control Module)	VCDF	

## LANCIA V10.10 Diagnostics List(Note:For reference only)

Thema(2013)	ESM(Electronic Shifter)	VCDA
	AFLS(Adaptive Front Lighting System)	VCDA
	PDM(Passenger Door Module)	VCDFFA
	PCM(Powertrain Control Module)	VCDFFA
	DDM(Driver Door Module)	VCDFFA
	AMP(Amplifier)	VCD
	PTS(Parktronics)	VCDFFA
	ABS(Anti Lock Brakes)	VCDFFA
	IPC(Instrument Panel Cluster)	VCDFFA
	SCCM(Steering Column Control Module)	VCD
	ITM(Intrusion)	VCDFFA
	HSM(Heated Seat Module)	VCDFFA
	EPS(Electric Power Steering)	VCDF
	RFH(Radio Frequency Hub)	VCDFFA
	MSM(Memory Seat Module)	VCDFFA
	DTCM(Drive Train Control Module)	VCDFFA
	ACC(Adaptive Cruise Control)	VCDF
	HFM(Hands Free Module(cell phone))	VCD
	BSM(Blind Spot Module)	VCD
	ADCM(Active Damping Control Module)	VCD
	RBSS(Right blind spot sensor)	VCD
LBSS(Left blind spot sensor)	VCD	
BCM(Body Controller)	VCDFFA	
ORC(Occupant Restraint)	VCDF	
TGW(Telematic Gateway Radio)	VCD	

## LANCIA V10.10 Diagnostics List(Note:For reference only)

Thema(2014)	HVAC(Heat, Ventilation and A/C)	VCDFA
	ICS(Integrated Center Stack)	VCDFA
	TCM(Transmission Control Module)	VCDF
	ESM(Electronic Shifter)	VCDA
	AFLS(Adaptive Front Lighting System)	VCDA
	PDM(Passenger Door Module)	VCDFA
	PCM(Powertrain Control Module)	VCDFA
	DDM(Driver Door Module)	VCDFA
	AMP(Amplifier)	VCD
	PTS(Parktronics)	VCDFA
	ABS(Anti Lock Brakes)	VCDFA
	IPC(Instrument Panel Cluster)	VCDFA
	SCCM(Steering Column Control Module)	VCD
	ITM(Intrusion)	VCDFA
	HSM(Heated Seat Module)	VCDFA
	EPS(Electric Power Steering)	VCDF
	RFH(Radio Frequency Hub)	VCDFA
	MSM(Memory Seat Module)	VCDFA
	DTCM(Drive Train Control Module)	VCDFA
	ACC(Adaptive Cruise Control)	VCDF
	HFM(Hands Free Module(cell phone))	VCD
	BSM(Blind Spot Module)	VCD
	ADCM(Active Damping Control Module)	VCD
RBSS(Right blind spot sensor)	VCD	
LBSS(Left blind spot sensor)	VCD	

## LANCIA V10.10 Diagnostics List(Note:For reference only)

Voyager(2012)

TIPMCGW(Central Gateway)	VCDFA
DVD(DVD Changer)	VCD
HVAC(Heat, Ventilation and A/C)	VCDFA
PLGM(Power Liftgate)	VCDFA
SAS(Steering Angle Sensor)	VCD
DMFL(Door Module Front Left)	VCDFA
CCN(Instrument Cluster/Cabin Compartment Node)	VCDFA
SUNR(Sunroof)	VCDA
PCM(Powertrain Control Module)	VCDFA
RADIO(RADIO)	VCDF
DMRL(Door Module Rear Left)	VCDFA
TPM(Tire Pressure Monitor)	VCDF
TCM(Transmission Control Module)	VCDFA
PEM(Passive Entry Module)	VCDF
VES3(Last Row Screen)	VCDFA
ORC(Occupant Restraint)	VCDF
EPPM(Electronic Pedestrian Protection Module)	VCDF
PSDML(Power Sliding Doors (Left))	VCD
FSM(Fold Stow Module)	VCDA
HFM(Hands Free Module(cell phone))	VCDA
ABS(Anti Lock Brakes)	VCDFA
PTS(Parktronics)	VCDFA
PSDMR(Power Sliding Doors (Right))	VCD
WCM(Wireless Control)	VCDFA
ITM(Intrusion)	VCDFA

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

	HSM(Heated Seat Module)	VCDFA
	DMRR(Door Module Rear Right)	VCDFA
	DMFR(Door Module Front Right)	VCDFA
	HIDT(High Intensity Discharge Translator)	VCDA
	VES2(Second Row Screen)	VCDFA
	AHBM(Automatic High Beam)	VCD
	MSMD(Memory Seat)	VCDFA
	AMP(Amplifier)	VCDF
	BSM(Blind Spot Module)	VCD
	TIPMCGW(Central Gateway)	VCDFA
	DVD(DVD Changer)	VCD
	HVAC(Heat, Ventilation and A/C)	VCDFA
	PLGM(Power Liftgate)	VCDFA
	SAS(Steering Angle Sensor)	VCD
	DMFL(Door Module Front Left)	VCDFA
	CCN(Instrument Cluster/Cabin Compartment Node)	VCDFA
	SUNR(Sunroof)	VCDA
	PCM(Powertrain Control Module)	VCDFA
	RADIO(RADIO)	VCDF
	DMRL(Door Module Rear Left)	VCDFA
	TPM(Tire Pressure Monitor)	VCDF
	TCM(Transmission Control Module)	VCDFA
	PEM(Passive Entry Module)	VCDF
	VES3(Last Row Screen)	VCDFA
	ORC(Occupant Restraint)	VCDF

## LANCIA V10.10 Diagnostics List(Note:For reference only)

Voyager(2013)	EPPM(Electronic Pedestrian Protection Module)	VCDF
	PSDML(Power Sliding Doors (Left))	VCD
	FSM(Fold Stow Module)	VCDA
	HFM(Hands Free Module(cell phone))	VCDA
	ABS(Anti Lock Brakes)	VCDF
	PTS(Parktronic)	VCDF
	PSDMR(Power Sliding Doors (Right))	VCD
	WCM(Wireless Control)	VCDF
	ITM(Intrusion)	VCDF
	HSM(Heated Seat Module)	VCDF
	DMRR(Door Module Rear Right)	VCDF
	DMFR(Door Module Front Right)	VCDF
	HIDT(High Intensity Discharge Translator)	VCDA
	VES2(Second Row Screen)	VCDF
	AHBM(Automatic High Beam)	VCD
	MSMD(Memory Seat)	VCDF
	AMP(Amplifier)	VCDF
	LBSS(Left blind spot sensor)	VCD
RBSS(Right blind spot sensor)	VCD	
	TIPMCGW(Central Gateway)	VCDF
	DVD(DVD Changer)	VCD
	HVAC(Heat, Ventilation and A/C)	VCDF
	PLGM(Power Liftgate)	VCDF
	SAS(Steering Angle Sensor)	VCD
	DMFL(Door Module Front Left)	VCDF



## LANCIA V10.10 Diagnostics List(Note:For reference only)

Voyager(2014)	CCN(Instrument Cluster/Cabin Compartment Node)	VCDFA
	SUNR(Sunroof)	VCDA
	PCM(Powertrain Control Module)	VCDFA
	RADIO(RADIO)	VCDF
	DMRL(Door Module Rear Left)	VCDFA
	TPM(Tire Pressure Monitor)	VCDF
	TCM(Transmission Control Module)	VCDFA
	PEM(Passive Entry Module)	VCDF
	VES3(Last Row Screen)	VCDFA
	ORC(Occupant Restraint)	VCDF
	EPPM(Electronic Pedestrian Protection Module)	VCDF
	PSDML(Power Sliding Doors (Left))	VCD
	FSM(Fold Stow Module)	VCDA
	HFM(Hands Free Module(cell phone))	VCDA
	ABS(Anti Lock Brakes)	VCDFA
	PTS(Parktronics)	VCDFA
	PSDMR(Power Sliding Doors (Right))	VCD
	WCM(Wireless Control)	VCDFA
	ITM(Intrusion)	VCDFA
	HSM(Heated Seat Module)	VCDFA
	DMRR(Door Module Rear Right)	VCDFA
	DMFR(Door Module Front Right)	VCDFA
	HIDT(High Intensity Discharge Translator)	VCDA
	VES2(Second Row Screen)	VCDFA
	AHBM(Automatic High Beam)	VCD

## LANCIA V10.10 Diagnostics List(Note:For reference only)

		MSMD(Memory Seat)	VCDFA
		AMP(Amplifier)	VCDF
		LBSS(Left blind spot sensor)	VCD
		RBSS(Right blind spot sensor)	VCD
DEDRA	'96 1.8 16V 115 CV	Bosch 5.3 ABS	VCD
		Hitachi MPI Injection	VCDA
	'96 1.8 16V 115 CV	Bosch 5.3 ABS	VCD
		Hitachi MPI Injection	VCDA
	'96 1.8 16V 130 CV	Bosch 5.3 ABS	VCD
		Hitachi MPI Injection	VCDA
	'98 1.6 16V	Bosch 5.3 ABS	VCD
		Magneti Marelli IAW 49F injection (1.6 eng.)	VCDAS049
DELTA (111)	'96 1.6 16V	Bosch 5.3 ABS	VCD
	'96 1.6 16V	Bosch 5.3 ABS	VCD
	'96 1.8 16V 115 CV	Bosch 5.3 ABS	VCD
		Hitachi MPI Injection	VCDA
	'96 1.8 16V 130 CV	Bosch 5.3 ABS	VCD
		Hitachi MPI Injection	VCDA
	'96 2.0 TURBO 16V	Bosch 5.3 ABS	VCD
	'96 TD	Bosch 5.3 ABS	VCD
	'98 1.6 16V	Bosch 5.3 ABS	VCD
		Magneti Marelli IAW 49F injection (1.6 eng.)	VCDAS049
	'98 1.8 16V	Bosch 5.3 ABS	VCD
		Hitachi MPI injection (eng. 1.8 16v '98)	VCDAS001
			Bosch Motronic Injection Me7.9.10

## LANCIA V10.10 Diagnostics List(Note:For reference only)

	1.4 TURBO 16V	Engine-Gearbox	Injection Landi Renzo LC02 Gas	VCDA
		Instrumentation	Marelli instrument panel 3	VCDAS003
			Marelli Radio Navigator	VCDA
			Marelli/Microsoft C3 Convergence	VCDAS004
			Marelli/Microsoft Convergence	VCDAS004
		Safety	Marelli Body Computer 8	VCDAS005
			SIEMENS Airbag 1 (Proxi)	VCDA
			TRW ABS ESP	VCDAS006
			TRW Lane Control Control Unit (HALF)	VCDA
		Comfort	Denso 3 climate control (Two-zone)	VCDAS007
			Driver's seat Lear 3	VCDA
			Passenger's seat Lear 3	VCDA
			TRW 3 Electric Steering	VCDS008
		Other systems	Tyre Pressure Control TRW 2	VCDAS057
			Valeo 2 Parking control unit	VCDAS059
			Valeo Semi-automatic Parking Control Unit	VCDAS056
	Engine-Gearbox	Bosch Diesel Injection EDC16C39 CF3/EOBD	VCDAS009	
		Marelli SELESPEED CFC300 Automatic	VCDAS010	
	Instrumentation	Marelli instrument panel 3	VCDAS003	
		Marelli Radio Navigator	VCDA	
Marelli/Microsoft C3 Convergence		VCDAS004		
Marelli/Microsoft		VCDAS004		

1.6 MJET 16V

	Convergence	
Safety	Marelli Body Computer 8	VCDAS005
	SIEMENS Airbag 1 (Proxi)	VCDA
	TRW ABS ESP	VCDAS006

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

DELTA (181)	1.8 JTS TB 16V	Comfort	TRW Lane Control Control Unit (HALF)	VCDA
			Denso 3 climate control (Two-zone)	VCDAS007
			Driver's seat Lear 3	VCDA
			Passenger's seat Lear 3	VCDA
			TRW 3 Electric Steering	VCDS008
		Other systems	Tyre Pressure Control TRW 2	VCDAS057
			Valeo 2 Parking control unit	VCDAS059
			Valeo Semi-automatic Parking Control Unit	VCDAS056
		1.8 JTS TB 16V	Engine-Gearbox	Automatic Gearbox AISIN AF40-6
	Bosch Injection Motronic MeD17.3.1			VCDAS012
	Instrumentation		Marelli instrument panel 3	VCDAS003
			Marelli Radio Navigator	VCDA
			Marelli/Microsoft C3 Convergence	VCDAS004
			Marelli/Microsoft Convergence	VCDAS004
	Safety		Marelli Body Computer 8	VCDAS005
			SIEMENS Airbag 1 (Proxi)	VCDA
			TRW ABS ESP	VCDAS006
			TRW Lane Control Control Unit (HALF)	VCDA
	Comfort		Denso 3 climate control (Two-zone)	VCDAS007
			Driver's seat Lear 3	VCDA
		Passenger's seat Lear 3	VCDA	

		TRW 3 Electric Steering	VCDS008
	Other systems	Tyre Pressure Control TRW 2	VCDAS057
		Valeo 2 Parking control unit	VCDAS059
		Valeo Semi-automatic Parking Control Unit	VCDAS056

## LANCIA V10.10 Diagnostics List (Note: For reference only)

1.9 MJET 16V TWINTB	Engine-Gearbox	Bosch Diesel Injection EDC16C39 CF5/E0BD	VCDAS009
	Instrumentation	Marelli instrument panel 3	VCDAS003
		Marelli Radio Navigator	VCDA
		Marelli/Microsoft C3 Convergence	VCDAS004
		Marelli/Microsoft Convergence	VCDAS004
	Safety	Marelli Body Computer 8	VCDAS005
		SIEMENS Airbag 1 (Proxi)	VCDA
		TRW ABS ESP	VCDAS006
		TRW Lane Control Control Unit (HALF)	VCDA
	Comfort	Denso 3 climate control (Two-zone)	VCDAS007
		Driver's seat Lear 3	VCDA
		Passenger's seat Lear 3	VCDA
		TRW 3 Electric Steering	VCDS008
	Other systems	Tyre Pressure Control TRW 2	VCDAS057
		Valeo 2 Parking control unit	VCDAS059
		Valeo Semi-automatic Parking Control Unit	VCDAS056
	Engine-Gearbox	Bosch Diesel Injection EDC16C39 CF5/E0BD	VCDAS009
	Instrumentation	Marelli instrument panel 3	VCDAS003
		Marelli Radio Navigator	VCDA
		Marelli/Microsoft C3 Convergence	VCDAS004
Marelli/Microsoft Convergence		VCDAS004	
	Marelli Body Computer 8	VCDAS005	

2.0 MJET 16V

Safety	SIEMENS Airbag 1 (Proxi)	VCDA
	TRW ABS ESP	VCDAS006
	TRW Lane Control Control Unit (HALF)	VCDA



## LANCIA V10.10 Diagnostics List(Note:For reference only)

		Comfort	Denso 3 climate control (Two-zone)	VCDAS007	
			Driver's seat Lear 3	VCDA	
			Passenger's seat Lear 3	VCDA	
		Other systems	TRW 3 Electric Steering	VCDS008	
			Tyre Pressure Control TRW 2	VCDAS057	
			Valeo 2 Parking control unit	VCDAS059	
'98 2.4 JTD		Engine-Gearbox	Bosch FDC 15 Diesel Injection (2.4 TD d.i.)	VCDAS050	
		Safety	Bosch 5.3 ABS	VCD	
			TRW MY 97 Air Bag (2F-2P)	VCD	
			TRW MY 97 Air Bag (2F-2P-2L-S)	VCD	
			TRW MY 97 Air Bag (2F-2P-S)	VCD	
		Engine-Gearbox	Bosch Motronic ME3.1 Injection (eng. 2.0)	VCDAS001	
			Safety	Bosch 5.3 ABS	VCD
				TRW MY 97 Air Bag (2F-2P)	VCD
				TRW MY 97 Air Bag (2F-2P-2L-S)	VCD
		TRW MY 97 Air Bag (2F-2P-S)		VCD	
		Engine-Gearbox	Bosch Motronic ME3.1 Injection (eng. 2.0)	VCDAS001	
			Safety	Bosch 5.3 ABS	VCD
TRW MY 97 Air Bag (2F-2P)	VCD				
TRW MY 97 Air Bag (2F-2P-2L)	VCD				
'99 2.4		Engine-Gearbox	Bosch Motronic ME3.1 Injection (eng. 2.0)	VCDAS001	
			Bosch 5.3 ABS	VCD	
			TRW MY 97 Air Bag (2F-2P)	VCD	
			TRW MY 97 Air Bag (2F-2P-2L)	VCD	

	Safety	2L-S)	
		TRW MY 97 Air Bag (2F-2P-S)	VCD
		TRW MY 97 Air Bag (2F-2P-2L)	VCD
		Bosch 5.3 ABS	VCD

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

K	99 3.0	Safety	TRW MY 97 Air Bag (2F-2P)	VCD
			TRW MY 97 Air Bag (2F-2P-2L-S)	VCD
			TRW MY 97 Air Bag (2F-2P-S)	VCD
			TRW MY 97 Air Bag (2F-2P-2L)	VCD
	20	Safety	Bosch 5.3 ABS	VCD
			TRW MY 97 Air Bag (2F-2P)	VCD
			TRW MY 97 Air Bag (2F-2P-2L-S)	VCD
			TRW MY 97 Air Bag (2F-2P-S)	VCD
	2.0 TURBO	Safety	Bosch 5.3 ABS	VCD
			TRW MY 97 Air Bag (2F-2P)	VCD
			TRW MY 97 Air Bag (2F-2P-2L-S)	VCD
			TRW MY 97 Air Bag (2F-2P-S)	VCD
	24	Safety	Bosch 5.3 ABS	VCD
			TRW MY 97 Air Bag (2F-2P)	VCD
			TRW MY 97 Air Bag (2F-2P-2L-S)	VCD
			TRW MY 97 Air Bag (2F-2P-S)	VCD
	2.4 TD	Safety	Bosch 5.3 ABS	VCD
			TRW MY 97 Air Bag (2F-2P)	VCD
			TRW MY 97 Air Bag (2F-2P-2L-S)	VCD
			TRW MY 97 Air Bag (2F-2P-S)	VCD

	30	Safety	Bosch 5.3 ABS	VCD
			TRW MY 97 Air Bag (2F-2P)	VCD
			TRW MY 97 Air Bag (2F-2P-2L-S)	VCD
			TRW MY 97 Air Bag (2F-2P-S)	VCD
		Allied Airbag MY 97 (2F-2P-2L-2T-I)	VCD	

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

16	Allied MY 97 Air Bag (2F-2P-2L-I-S)	VCD
	Allied MY 97 AirBag (2F-2P-2L-I)	VCD
	Allied MY 97 AirBag (2F-2P-I)	VCD
	Allied MY 97 AirBag (2F-2P-I-S)	VCD
	Bosch 5.3 ABS	VCD
	Bosch discharge headlamp (left)	VCDA
	Bosch discharge headlamp (right)	VCDA
	ESP TRW Lucas ABS	VCDAS013
	Injection - Magneti Marelli IAW 4AF/4EF/59F/5AF Outside EEC	VCDAS014
	Magneti Marelli IAW 49F injection (1.6 eng.)	VCDAS049
	Magneti Marelli IAW 4AF/4EF/59F/5AF EOBD injection	VCDAS014
	Marelli Code 2 Electronic Key	VCD
	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	VCDA
	TRW Lucas ABS	VCDAS015
	VAS 97/3 Door Lock RF alarm/receiver	VCD
	Allied Airbag MY 97 (2F-2P-2L-2T-I)	VCD
	Allied MY 97 Air Bag (2F-2P-2L-I-S)	VCD
	Allied MY 97 AirBag (2F-2P-2L-I)	VCD
	Allied MY 97 AirBag (2F-2P-I)	VCD
	Allied MY 97 AirBag (2F-2P-I-S)	VCD
	Bosch 5.3 ABS	VCD
	Bosch discharge headlamp (left)	VCDA
	Bosch discharge headlamp (right)	VCDA
	ESP TRW Lucas ABS	VCDAS013
	Hitachi EOBD injection	VCDAS001

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

LYBRA		Hitachi MPI injection (eng. 1.8 16v '98)	VCDAS001
		Marelli Code 2 Electronic Key	VCD
		SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	VCDA
		TRW Lucas ABS	VCDAS015
		VAS 97/3 Door Lock RF alarm/receiver	VCD
	1.9 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-I)	VCD
		Allied MY 97 Air Bag (2F-2P-2L-I-S)	VCD
		Allied MY 97 AirBag (2F-2P-2L-I)	VCD
		Allied MY 97 AirBag (2F-2P-I)	VCD
		Allied MY 97 AirBag (2F-2P-I-S)	VCD
		Bosch 5.3 ABS	VCD
		Bosch Diesel EDC15 injection (1.9 TD d.i. engine)	VCDAS050
		Bosch discharge headlamp (left)	VCDA
		Bosch discharge headlamp (right)	VCDA
		Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	VCDAS016
		ESP TRW Lucas ABS	VCDAS013
		Marelli Code 2 Electronic Key	VCD
		SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	VCDA
		TRW Lucas ABS	VCDAS015
		VAS 97/3 Door Lock RF alarm/receiver	VCD
		Allied Airbag MY 97 (2F-2P-2L-2T-I)	VCD
		Allied MY 97 Air Bag (2F-2P-2L-I-S)	VCD
		Allied MY 97 Air Bag (2F-2P-2L-I)	VCD
		Allied MY 97 Air Bag (2F-2P-I)	VCD
		Allied MY 97 Air Bag (2F-2P-I-S)	VCD

## LANCIA V10.10 Diagnostics List(Note:For reference only)

	20	Bosch 5.3 ABS	VCD
		Bosch discharge headlamp (left)	VCDA
		Bosch discharge headlamp (right)	VCDA
		Bosch Motronic Me3.1 EOBD injection (eng. 2.0/2.4 20v)	VCDAS001
		ESP TRW Lucas ABS	VCDAS013
		Injection-Bosch Motronic Me3.1 (eng. 2.0/2.4 20v Outside EEC)	VCDAS001
		Marelli Code 2 Electronic Key	VCD
		SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	VCDA
		TRW Lucas ABS	VCDAS015
		VAS 97/3 Door Lock RF alarm/receiver	VCD
	2.4 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-I)	VCD
		Allied MY 97 Air Bag (2F-2P-2L-I-S)	VCD
		Allied MY 97 AirBag (2F-2P-2L-I)	VCD
		Allied MY 97 AirBag (2F-2P-I)	VCD
		Allied MY 97 AirBag (2F-2P-I-S)	VCD
		Bosch 5.3 ABS	VCD
		Bosch discharge headlamp (left)	VCDA
		Bosch discharge headlamp (right)	VCDA
		Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	VCDAS016
		Bosch EDC15 Diesel Injection (2.4 TD d.i. eng.)	VCDAS050
ESP TRW Lucas ABS	VCDAS013		
Marelli Code 2 Electronic Key	VCD		
SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	VCDA		
TRW Lucas ABS	VCDAS015		
VAS 97/3 Door Lock RF alarm/receiver	VCD		

## LANCIA V10.10 Diagnostics List (Note: For reference only)

1.3 JTD	Engine-Gearbox	Automatic Gearbox Marelli SELESPEED CFC	VCDAS017
		Marelli 6JF EOBD Diesel Injection (eng. 1.3)	VCDAS018
		Marelli Automatic Gearbox SELESPEED	VCDAS055
		Marelli Diesel Injection 6F3 EOBD (eng. 1.3)	VCDAS051
		Marelli Diesel Injection 8DF CF5/EOBD (eng.	VCDAS019
	Instrumentation	Marelli 3 Connect (multi-model)	VCDA
		Marelli instrument panel (Comfort)	VCDAS020
		Marelli instrument panel (Modal)	VCDAS021
	Safety	Bosch 8 ABS	VCD
		Bosch 8 VDC ABS	VCDAS045
		Marelli 7 Body Computer	VCDAS047
		Marelli Body Computer 1	VCDAS046
		TRW MY 03 Airbag (2F-2P-2L-2T-I)	VCDA
		TRW MY 03 Airbag (2F-2P-2T-I)	VCDA
		TRW MY 03 Airbag (2F-2P-I)	VCDA
	Comfort	Denso Climate Control 1 (Two-zone)	VCDAS022
		Marelli/Microsoft Convergence	VCDAS004
		TRW 1 Power Steering	VCDAS061
		TRW 3 Electric Steering	VCDS008
	Other systems	G.E.PROCOND boot	VCDA
G.E.PROCOND Driver's Door		VCDA	
G.E.PROCOND Passenger		VCDA	



		Door	
		Single BITRON Driver's Door	VCDA
		Single Driver's Door G.E. PROCOND	VCDA
		Valeo Parking control unit	VCDS023

## LANCIA V10.10 Diagnostics List (Note: For reference only)

1.4 16V	Engine-Gearbox	Bosch Motronic Injection Me7.9.10	VCDAS002
		Bosch Motronic ME7.3 H4M	VCDAS001
		EOBD Injection Marelli SELE SPEED CFC228F Automatic	VCDAS043
		Marelli SELE SPEED CFC328 Automatic	VCDAS024
	Instrumentation	Marelli 3 Connect (multi-model)	VCDA
		Marelli instrument panel (Comfort)	VCDAS020
		Marelli instrument panel (Modal)	VCDAS021
	Safety	Bosch 8 ABS	VCD
		Bosch 8 VDC ABS	VCDAS045
		Marelli 7 Body Computer	VCDAS047
		Marelli Body Computer 1	VCDAS046
		TRW MY 03 AirBag (2F-2P-2L-2T-I)	VCDA
		TRW MY 03 AirBag (2F-2P-2T-I)	VCDA
	Comfort	TRW MY 03 AirBag (2F-2P-I)	VCDA
		Denso Climate Control 1 (Two-zone)	VCDAS022
		Marelli/Microsoft Convergence	VCDAS004
		TRW 1 Power Steering	VCDAS061
	Other systems	TRW 3 Electric Steering	VCDS008
		G.E.PROCOND boot	VCDA
		G.E.PROCOND Driver's Door	VCDA
	G.E.PROCOND Passenger	VCDA	

		Door	
		Single BITRON Driver's Door	VCDA
		Single Driver's Door G.E. PROCOND	VCDA
		Valeo Parking control unit	VCDS023
	Engine-Gearbox	Magneti Marelli Injection IAW 5SF	VCDAS025

## LANCIA V10.10 Diagnostics List(Note:For reference only)

MUSA	1.4 8V	Instrumentation	Marelli 3 Connect (multi-model)	VCDA
			Marelli instrument panel (Comfort)	VCDAS020
			Marelli instrument panel (Modal)	VCDAS021
		Safety	Bosch 8 ABS	VCD
			Bosch 8 VDC ABS	VCDAS045
			Marelli 7 Body Computer	VCDAS047
			Marelli Body Computer 1	VCDAS046
			TRW MY 03 AirBag (2F-2P-2L-2T-I)	VCDA
			TRW MY 03 AirBag (2F-2P-2T-I)	VCDA
			TRW MY 03 AirBag (2F-2P-I)	VCDA
		Comfort	Denso Climate Control 1 (Two-zone)	VCDAS022
			Marelli/Microsoft Convergence	VCDAS004
			TRW 1 Power Steering	VCDAS061
			TRW 3 Electric Steering	VCDS008
		Other systems	G.E.PROCOND boot	VCDA
			G.E.PROCOND Driver's Door	VCDA
			G.E.PROCOND Passenger Door	VCDA
			Single Driver's Door G.E. PROCOND	VCDA
			Valeo Parking control unit	VCDS023
		Engine-Gearbox	Bosch Diesel Injection EDC16C39 CF5/EOBD	VCDAS009

	Instrumentation	Marelli 3 Connect (multi-model)	VCDA
		Marelli instrument panel (Comfort)	VCDAS020
		Marelli instrument panel (Modal)	VCDAS021
		Bosch 8 ABS	VCD
		Bosch 8 VDC ABS	VCDAS045

## LANCIA V10.10 Diagnostics List(Note:For reference only)

1.6 MJET 16V	Safety	Marelli Body Computer	VCD	
		TRW MY 03 AirBag (2F-2P-2L-2T-I)	VCDA	
		TRW MY 03 AirBag (2F-2P-2T-I)	VCDA	
		TRW MY 03 AirBag (2F-2P-I)	VCDA	
		Comfort	Denso Climate Control 1 (Two-zone)	VCDAS022
			Marelli/Microsoft Convergence	VCDAS004
			TRW 1 Power Steering	VCDAS061
			TRW 3 Electric Steering	VCDS008
		Other systems	G.E.PROCOND boot	VCDA
	G.E.PROCOND Driver's Door		VCDA	
	G.E.PROCOND Passenger Door		VCDA	
	Single Driver's Door G.E. PROCOND		VCDA	
	Valeo Parking control unit		VCDS023	
	Bosch EDC16C9 CF3/E0BD Diesel Injection		VCDAS026	
	Engine-Gearbox	Bosch EDC16C9 CF4/E0BD Diesel Injection	VCDAS027	
		Instrumentation	Marelli 3 Connect (multi-model)	VCDA
	Marelli instrument panel (Comfort)		VCDAS020	
	Marelli instrument panel (Modal)		VCDAS021	
		Bosch 8 ABS	VCD	
		Bosch 8 VDC ABS	VCDAS045	

1.9 JTD

Safety	Marelli 7 Body Computer	VCDAS047
	Marelli Body Computer 1	VCDAS046
	TRW MY 03 AirBag (2F-2P-2L-2T-I)	VCDA
	TRW MY 03 AirBag (2F-2P-2T-I)	VCDA
	TRW MY 03 AirBag (2F-2P-I)	VCDA

## LANCIA V10.10 Diagnostics List(Note:For reference only)

		Comfort	Denso Climate Control 1 (Two-zone)	VCDAS022	
			Marelli/Microsoft Convergence	VCDAS004	
		Other systems		TRW 3 Electric Steering	VCDS008
				G.E.PROCOND boot	VCDA
				G.E.PROCOND Driver's Door	VCDA
				G.E.PROCOND Passenger Door	VCDA
				Single BITRON Driver's Door	VCDA
				Single Driver's Door G.E. PROCOND	VCDA
				Valeo Parking control unit	VCDS023
Engine-Gearbox		Magneti Marelli MM4MP2 PSA Injection	VCDA		
		Magneti Marelli MM6LP PSA Injection	VCDAS053		
		Siemens AL4 TA2000 V PSA Automatic	VCDAS054		
		Instrumentation		Marelli DAV PSA Connect control	VCD
				Marelli odometer w. lamps (BTO)	VCDA
				Marelli PSA Connect	VCDAS028
Marelli PSA instrument panel	VCDA				
		Sagem multi-function screen	VCDA		
		Bosch 5.7 ESP PSA ABS	VCDAS052		

2.0 16V



Safety	Sagem Body Computer	VCDAS029
	Temic airbag	VCDS030
	Texton alarm 2	VCDA
Comfort	Bitron PSA driver's seat	VCDA
	Clarion CD Changer	VCDA
	Clarion/Philips sound system	VCDAS031

## LANCIA V10.10 Diagnostics List(Note:For reference only)

	Other systems	Marelli PSA climate control	VCDA
		Eaton multi-switch stalk unit (COM2000)	VCD
		Inalfa central sunroof	VCDAS084
		Inalfa front sunroof	VCDAS084
		Inalfa rear sunroof	VCDAS084
		Marelli PSA Driver's Door	VCDA
		Marelli PSA Passenger's Door	VCDS032
		Texton sliding doors	VCDA
		Valeo PSA discharge headlamp (LH)	VCDAS062
		Valeo PSA discharge headlamp (RH)	VCDAS063
		Valeo PSA Parking Control unit	VCDA
			Engine-Gearbox
Siemens AL4 TA2000 V PSA Automatic	VCDAS054		
	Instrumentation	Marelli DAV PSA Connect control	VCD
		Marelli odometer w. lamps (BTO)	VCDA
		Marelli PSA Connect	VCDAS028
		Marelli PSA instrument panel	VCDA
		Sagem multi-function screen	VCDA
	Safety	Bosch 5.7 ESP PSA ABS	VCDAS052
		Sagem Body Computer	VCDAS029
		Temic airbag	VCDS030

2.0 JTD 16V

	Texton alarm 2	VCDA
	Bitron PSA driver's seat	VCDA
	Clarion CD Changer	VCDA
Comfort	Clarion/Philips sound system	VCDAS031

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

PHEDRA	Other systems	Marelli PSA climate control	VCDA
		WEBASTO Heater (PSA)	VCDA
		Eaton multi-switch stalk unit (COM2000)	VCD
		Inalfa central sunroof	VCDAS084
		Inalfa front sunroof	VCDAS084
		Inalfa rear sunroof	VCDAS084
		Marelli diesel additive check	VCDAS034
		Marelli PSA Driver's Door	VCDA
		Marelli PSA Passenger's Door	VCDS032
		Texton sliding doors	VCDA
		Valeo PSA discharge headlamp (LH)	VCDAS062
		Valeo PSA discharge headlamp (RH)	VCDAS063
		Valeo PSA Parking Control unit	VCDA
	Engine-Gearbox	Bosch EDC 15 PSA diesel injection (eng. 16v)	VCDAS033
	Instrumentation	Marelli DAV PSA Connect control	VCD
		Marelli odometer w. lamps (BTO)	VCDA
		Marelli PSA Connect	VCDAS028
		Marelli PSA instrument panel	VCDA
		Sagem multi-function screen	VCDA
		Bosch 5.7 ESP PSA ABS	VCDAS052

Safety	Sagem Body Computer	VCDAS029
	Temic airbag	VCDS030
	Texton alarm 2	VCDA
	Bitron PSA driver's seat	VCDA
	Clarion CD Changer	VCDA

## LANCIA V10.10 Diagnostics List(Note:For reference only)

2.2 JTD 16V	Comfort	Clarion/Philips sound system	VCDAS031
		Marelli PSA climate control	VCDA
		WEBASTO Heater (PSA)	VCDA
	Other systems	Eaton multi-switch stalk unit (COM2000)	VCD
		Inalfa central sunroof	VCDAS084
		Inalfa front sunroof	VCDAS084
		Inalfa rear sunroof	VCDAS084
		Marelli diesel additive check	VCDAS034
		Marelli PSA Driver's Door	VCDA
		Marelli PSA Passenger's Door	VCDS032
		Texton sliding doors	VCDA
		Valeo PSA discharge headlamp (LH)	VCDAS062
		Valeo PSA discharge headlamp (RH)	VCDAS063
		Valeo PSA Parking Control unit	VCDA
	Engine-Gearbox	Bosch Motronic Me7.4.6 PSA Injection	VCDAS035
		ZF 4HP20 PSA Automatic Gearbox	VCD
	Instrumentation	Marelli DAV PSA Connect control	VCD
		Marelli odometer w. lamps (BTO)	VCDA
		Marelli PSA Connect	VCDAS028
		Marelli PSA instrument	VCDA

	panel	
	Sagem multi-function screen	VCDA
Safety	Bosch 5.7 ESP PSA ABS	VCDAS052
	Sagem Body Computer	VCDAS029
	Temic airbag	VCDS030
	Texton alarm 2	VCDA

## LANCIA V10.10 Diagnostics List (Note: For reference only)

3.0 V6 24V	Comfort	Bitron PSA driver's seat	VCDA
		Clarion CD Changer	VCDA
		Clarion/Philips sound system	VCDAS031
		Marelli PSA climate control	VCDA
	Other systems	Eaton multi-switch stalk unit (COM2000)	VCD
		Inalfa central sunroof	VCDAS084
		Inalfa front sunroof	VCDAS084
		Inalfa rear sunroof	VCDAS084
		Marelli PSA Driver's Door	VCDA
		Marelli PSA Passenger's Door	VCDS032
		Texton sliding doors	VCDA
		Valeo PSA discharge headlamp (LH)	VCDAS062
		Valeo PSA discharge headlamp (RH)	VCDAS063
		Valeo PSA Parking Control unit	VCDA
Engine-Gearbox	Bosch EDC 15 PSA diesel injection (eng. 16v)	VCDAS033	
	Siemens AL4 TA2000 V PSA Automatic	VCDAS054	
	Siemens Diesel Injection SID803 CF4/E0BD	VCDAS036	
Instrumentation	Johnson/Borg multi-function screen	VCDAS073	
	Marelli odometer warning lamps (BTO CAN)	VCDA	
	PSA DAV Connect Command (CAN)	VCD	
	PSA Marelli Connect	VCDAS085	



	(CAN)	
	Marelli Connect PSA RT5 (CAN)	VCDAS082
	PSA Marelli cluster (CAN)	VCDA
	Bosch ABS 8.1 ESP PSA (CAN)	VCDAS070
	Johnson EV Body Computer (BSI CAN) 2	VCDAS088

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

PHEDRA (180)	2.0 JTD 16V	Safety	BOSCH/TEMIC Airbag (CAN)	VCDAS071
			PSA Bosch ABS 8 ESP (CAN)	VCDAS083
			Delphi Alarm	VCDAS072
		Comfort	Blaupunkt radio	VCDA
			PSA Denso Climate Control (CAN)	VCDA
			WEBASTO Heater (PSA)	CDA
		Other systems	Valeo PSA discharge headlamp (LH)	VCDAS062
			Valeo PSA discharge headlamp (RH)	VCDAS063
			Delphi multi-function switch (COM2005)	VCDA
			Brose Driver's Door	VCDA
			Brose passenger door	VCDA
			Delphi multi-SWITCH (COM2003)	VCDA
			Inalfa centre sunroof (CAN)	VCDA
			Inalfa front sunroof (CAN)	VCDA
			Inalfa rear sunroof (CAN)	VCDA
Marelli Diesel additive control (CAN)	VCDAS087			
Siemens Tyre Pressure Control	VCDAS086			
Texton sliding doors (CAN)	VCDA			
PSA Valeo Parking Control Unit (CAN)	VCDA			

	Engine-Gearbox	AISIN AM6 Automatic Gearbox	VCDAS037
		Bosch Diesel Injection EDC 16CP39	VCDAS038
		Bosch EDC 15 PSA diesel injection (eng. 16v)	VCDAS033
		Johnson/Borg multi-function screen	VCDAS073
		Marelli odometer warning lamps (BTO CAN)	VCDA
		Marelli Connect PSA RT5 (CAN)	VCDAS082

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

2.2 JTD 16V	Instrumentation	PSA DAV Connect Command (CAN)	VCD
		PSA Marelli Connect (CAN)	VCDAS085
		PSA Marelli cluster (CAN)	VCDA
	Safety	Bosch ABS 8.1 ESP PSA (CAN)	VCDAS070
		Johnson EV Body Computer (BSI CAN) 2	VCDAS088
		BOSCH/TEMIC Airbag (CAN)	VCDAS071
		PSA Bosch ABS 8 ESP (CAN)	VCDAS083
		Delphi Alarm	VCDAS072
	Comfort	Blaupunkt radio	VCDA
		PSA Denso Climate Control (CAN)	VCDA
		WEBASTO Heater (PSA)	CDA
	Other systems	Valeo PSA discharge headlamp (LH)	VCDAS062
		Valeo PSA discharge headlamp (RH)	VCDAS063
		Brose Driver's Door	VCDA
		Brose passenger door	VCDA
		Delphi multi-SWITCH (COM2003)	VCDA
		Inalfa centre sunroof (CAN)	VCDA
		Inalfa front sunroof (CAN)	VCDA
Inalfa rear sunroof (CAN)		VCDA	
Marelli Diesel additive	VCDAS087		

			control (CAN)	
			Siemens Tyre Pressure Control	VCDAS086
			Texton sliding doors (CAN)	VCDA
			PSA Valeo Parking Control Unit (CAN)	VCDA
		Engine-Gearbox	Basch Motronic Me7.3.1 EOB Injection (2)	VCDAS001
			ESP TRW Lucas ABS	VCDAS013

## LANCIA V10.10 Diagnostics List(Note:For reference only)

	2.0 20V TB	Safety	Marelli Easy-go Body computer	VCDAS046
			Marelli Full Body computer	VCDAS046
			TRW MY99 Airbag (2F-4P-2L-2T-I-S-C)	VCD
			TRW MY99 Airbag (2F-4P-4L-2T-I-S-C)	VCD
		Comfort	Bitron driving seat	VCDA
			Bitron passenger seat	VCDA
			Borletti/Hella climate control	VCDS089
			SAGEM SpeedPro power steering	VCD
		Other systems	Marelli Boot	VCDA
			Marelli Driver's Door	VCDA
			Marelli Passenger Door	VCDA
			Valeo Parking control unit	VCDS023
	2.4 20V	Engine-Gearbox	AISIN YLII 5 Automatic Gearbox	VCDA
			Bosch Motronic Me3.1 EOBD Injection (eng.	VCDAS001
		Safety	ESP TRW Lucas ABS	VCDAS013
			Marelli Easy-go Body computer	VCDAS046
			Marelli Full Body computer	VCDAS046
			TRW MY99 Airbag (2F-4P-2L-2T-I-S-C)	VCD
			TRW MY99 Airbag (2F-4P-4L-2T-I-S-C)	VCD
Comfort		Bitron driving seat	VCDA	
		Bitron passenger seat	VCDA	
		Borletti/Hella climate	VCDS089	

	control	
	SAGEM SpeedPro power steering	VCD
	Marelli Boot	VCDA
	Marelli Driver's Door	VCDA

## LANCIA V10.10 Diagnostics List (Note: For reference only)

		Other systems		
THESES	2.4 JTD 10V		Marelli Passenger Door	VCDA
			Valeo Parking control unit	VCDS023
		Engine-Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection	VCDAS016
		Safety	ESP TRW Lucas ABS	VCDAS013
			Marelli Easy-go Body computer	VCDAS046
			Marelli Full Body computer	VCDAS046
			TRW MY99 Airbag (2F-4P-2L-2T-I-S-C)	VCD
			TRW MY99 Airbag (2F-4P-4L-2T-I-S-C)	VCD
		Comfort	Bitron driving seat	VCDA
			Bitron passenger seat	VCDA
			Borletti/Hella climate control	VCDS089
			SAGEM SpeedPro power steering	VCD
		Other systems	Marelli Boot	VCDA
			Marelli Driver's Door	VCDA
			Marelli Passenger Door	VCDA
			Valeo Parking control unit	VCDS023
		Engine-Gearbox	AISIN YLII 5 Automatic Gearbox	VCDA
			Bosch Diesel Injection EDC16C39 CF4/EOBD	VCDAS039
			Bosch EDC16 CF3/EOBD Diesel Injection	VCDAS040
		Instrumentation	Nippon Seiki instrument panel (Thesis)	VCDAS060
		ESP TRW Lucas ABS	VCDAS013	
		Marelli Easy-go Body computer	VCDAS046	



2.4 JTD 20V

Safety	Marelli Full Body computer	VCDAS046
	TRW MY99 Airbag (2F-4P-2L-2T-I-S-C)	VCD
	TRW MY99 Airbag (2F-4P-4L-2T-I-S-C)	VCD

## LANCIA V10.10 Diagnostics List(Note:For reference only)

3.0 V6 24V	Comfort	Bitron driving seat	VCDA	
		Bitron passenger seat	VCDA	
		Borletti/Hella climate control	VCDS089	
		SAGEM SpeedPro power steering	VCD	
		Other systems	Marelli Boot	VCDA
			Marelli Driver's Door	VCDA
			Marelli Passenger Door	VCDA
			Valeo Parking control unit	VCDS023
	Engine-Gearbox	AISIN YLII 5 Automatic Gearbox	VCDA	
		Bosch Motronic EOBDME3.1 Injection (eng.)	VCDAS001	
	Instrumentation	Nippon Seiki instrument panel (Thesis)	VCDAS060	
		Safety	ESP TRW Lucas ABS	VCDAS013
	Marelli Easy-go Body computer		VCDAS046	
	Marelli Full Body computer		VCDAS046	
	TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)		VCD	
	TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)		VCD	
	TRW MY 99 Airbag (2F-4P-I-S-C)		VCD	
	Comfort	Bitron driving seat	VCDA	
		Bitron passenger seat	VCDA	
		Borletti/Hella climate control	VCDS089	
SAGEM SpeedPro power steering		VCD		

	Other systems	Marelli Boot	VCDA
		Marelli Driver's Door	VCDA
		Marelli Passenger Door	VCDA
		Valeo Parking control unit	VCDS023

## LANCIA V10.10 Diagnostics List(Note:For reference only)

	3.2 V6 24V	Engine-Gearbox	AISIN YLII 5 Automatic Gearbox	VCDA
			Bosch Motronic ME7.3.1 EOBD Injection	VCDAS001
			Injection-Bosch Motronic Me7.3.1 Outside	VCDAS001
		Instrumentation	Nippon Seiki instrument panel (Thesis)	VCDAS060
		Safety	ESP TRW Lucas ABS	VCDAS013
			Marelli Easy-go Body computer	VCDAS046
			Marelli Full Body computer	VCDAS046
			TRW MY 99 Airbag (2F-4P-2L-2T-I-S-C)	VCD
			TRW MY 99 Airbag (2F-4P-4L-2T-I-S-C)	VCD
		Comfort	Bitron driving seat	VCDA
			Bitron passenger seat	VCDA
			Borletti/Hella climate control	VCDS089
			SAGEM SpeedPro power steering	VCD
		Other systems	Marelli Boot	VCDA
			Marelli Driver's Door	VCDA
			Marelli Passenger Door	VCDA
			Valeo Parking control unit	VCDS023
		11	Allied MY 97 Air Bag (2F-2P-2L-S)	VCD
			Allied MY 97 Airbag (2F-2P-2L-I)	VCD
			Allied MY 97 Airbag (2F-2P-I)	VCD
Bosch 5.3 ABS	VCD			
Magneti Marelli IAW 16F Injection	VCD			

Allied MY 97 Air Bag (2F-2P-2L-S)	VCD
Allied MY 97 Airbag (2F-2P-2L-l)	VCD
Allied MY 97 Airbag (2F-2P-l)	VCD

**LANCIA V10.10 Diagnostics List(Note:For reference only)**

Y	12	Bosch 5.3 ABS	VCD
		Fuji MX665 Automatic Transmission (EEC2 engine)	VCD
		Magneti Marelli IAW 16F Injection	VCD
	1.2 16V	Allied MY 97 Air Bag (2F-2P-2L-S)	VCD
		Allied MY 97 Airbag (2F-2P-2L-I)	VCD
		Allied MY 97 Airbag (2F-2P-I)	VCD
		Bosch 5.3 ABS	VCD
	1.2 16V CF3	Allied MY 97 Air Bag (2F-2P-2L-S)	VCD
		Allied MY 97 Airbag (2F-2P-2L-I)	VCD
		Allied MY 97 Airbag (2F-2P-I)	VCD
		Bosch 5.3 ABS	VCD
		Bosch Motronic ME7.3H4 EOBD injection	VCDAS001
	1.2 CF3	Allied MY 97 Air Bag (2F-2P-2L-S)	VCD
		Allied MY 97 Air Bag (2F-2P-S)	VCD
		Allied MY 97 Airbag (2F-2P)	VCD
		Allied MY 97 Airbag (2F-2P-2L-I)	VCD
		Allied MY 97 Airbag (2F-2P-I)	VCD
		Bosch 5.3 ABS	VCD
		Fuji MX665 Automatic Transmission (EEC2 engine)	VCD
		Magneti Marelli IAW 4AF/4EF/59F/5AF EOBD injection	VCDAS014
	14	Allied MY 97 Airbag (2F-2P)	VCD
Allied MY 97 Airbag (2F-2P-2L-I)		VCD	
Allied MY 97 Airbag (2F-2P-I)		VCD	
Bosch 5.3 ABS		VCD	

		Engine-Gearbox	Bosch Motronic ME7.3H4M EOBD Injection	VCDAS001
--	--	----------------	---	----------

## LANCIA V10.10 Diagnostics List(Note:For reference only)

1.2 16V	Instrumentation	Marelli 3 Connect (multi-model)	VCDA
		Siemens instrument panel	VCDAS058
	Safety	Autoliv AirBag 99 (A) (2F-2P-2L-I)	VCDA
		Autoliv Airbag MY 99 (2F-2P-2L-2T-1G-I)	VCDA
		Autoliv Airbag MY 99 (2F-2P-2L-2T-I)	VCDA
		Autoliv Airbag MY 99 (2F-2P-2T-I)	VCDA
		Autoliv Airbag MY 99 (2F-2P-4L-2T-1G-I)	VCDA
		Autoliv MY 99 Airbag (2F-2P-I)	VCDA
		ESP TRW Lucas ABS	VCDAS013
		Marelli/Finmek Body Computer	VCDAS041
		TRW Lucas ABS	VCDAS015
	Comfort	DELPHI Electric Steering	VCDS044
		Denso Climate Control (Two-zone)	VCDAS007
	Other systems	Bitron Driver's door	VCDA
		BITRON passenger door	VCDA
		Bosch Parking Control Unit	VCDAS042
		G.E.PROCKND Driver's Door	VCDA
		G.E.PROCOND Passenger Door	VCDA
		Single BITRON Driver's Door	VCDA



		Single Driver's Door G.E.PROCOND Marelli JAW 4AP/4EF/59F/5AF	VCDA
	Engine-Gearbox		VCDAS014
	Instrumentation	Marelli 3 Connect (multi-model)	VCDA
		Siemens instrument panel	VCDAS058
		Autoliv AirBag 99 (A) (2F-2P-2L-I)	VCDA
		Autoliv Airbag MY 99 (2F-2P-2L-2T-1G-I)	VCDA

## LANCIA V10.10 Diagnostics List(Note:For reference only)

1.2 8V	Safety	Autoliv Airbag MY 99 (2F-2P-2L-2T-I)	VCDA
		Autoliv Airbag MY 99 (2F-2P-2T-I)	VCDA
		Autoliv Airbag MY 99 (2F-2P-4L-2T-1G-I)	VCDA
		Autoliv MY 99 Airbag (2F-2P-I)	VCDA
		ESP TRW Lucas ABS	VCDAS013
		Marelli/Finmek Body Computer	VCDAS041
		TRW Lucas ABS	VCDAS015
	Comfort	DELPHI Electric Steering	VCDS044
		Denso Climate Control (Two-zone)	VCDAS007
	Other systems	BITRON Driver's door	VCDA
		BITRON passenger door	VCDA
		Bosch Parking Control Unit	VCDAS042
		G.E.PROCKND Driver's Door	VCDA
		G.E.PROCOND Passenger Door	VCDA
		Single BITRON Driver's Door	VCDA
		Single Driver's Door G.E.PROCOND	VCDA
	Engine-Gearbox	Marelli 6JF EOBD Diesel Injection (eng. 1.3)	VCDAS018
		Marelli Automatic Gearbox SELESPEED	VCDAS055
		Marelli Diesel Injection 6F3 EOBD (eng. 1.3)	VCDAS051
	Instrumentation	Marelli 3 Connect (multi-model)	VCDA

	Siemens instrument panel	VCDAS058
	Autoliv AirBag 99 (A) (2F-2P-2L-I)	VCDA
	Autoliv Airbag MY 99 (2F-2P-2L-2T-1G-I)	VCDA
	Autoliv Airbag MY 99 (2F-2P-2L-2T-I)	VCDA
	Autoliv Airbag MY 99 (2F-2P-2T-I)	VCDA

## LANCIA V10.10 Diagnostics List(Note:For reference only)

YPSILON	1.3 JTD	Safety	Autoliv Airbag MY 99 (2F-2P-4L-2T-1G-I)	VCDA
			Autoliv MY 99 Airbag (2F-2P-I)	VCDA
			ESP TRW Lucas ABS	VCDAS013
			Marelli/Finmek Body Computer	VCDAS041
			TRW Lucas ABS	VCDAS015
		Comfort	DELPHI Electric Steering	VCDS044
			Denso Climate Control (Two-zone)	VCDAS007
		Other systems	BITRON Driver's door	VCDA
			BITRON passenger door	VCDA
			Bosch Parking Control Unit	VCDAS042
			G.E.PROCKND Driver's Door	VCDA
			G.E.PROCOND Passenger Door	VCDA
			Single BITRON Driver's Door	VCDA
			Single Driver's Door G.E.PROCOND	VCDA
	Engine-Gearbox	Bosch Motronic ME7.3H4M EOBD Injection	VCDAS001	
		Marelli SELESPEED CFC228F Automatic	VCDAS043	
	Instrumentation	Marelli 3 Connect (multi-model)	VCDA	
		Siemens instrument panel	VCDAS058	
		Autoliv AirBag 99 (A) (2F-2P-2L-I)	VCDA	
		Autoliv Airbag MY 99 (2F-	VCDA	

Safety

2P-2L-2T-1G-I)	
Autoliv Airbag MY 99 (2F-2P-2L-2T-I)	VCDA
Autoliv Airbag MY 99 (2F-2P-2T-I)	VCDA
Autoliv Airbag MY 99 (2F-2P-4L-2T-1G-I)	VCDA
Autoliv MY 99 Airbag (2F-2P-I)	VCDA
ESP TRW Lucas ABS	VCDAS013

## LANCIA V10.10 Diagnostics List (Note: For reference only)

1.4 16V			Marelli/Finmek Body Computer	VCDAS041	
			TRW Lucas ABS	VCDAS015	
		Comfort	DELPHI Electric Steering	VCDS044	
			Denso Climate Control (Two-zone)	VCDAS007	
		Other systems	BITRON Driver's door	VCDA	
			BITRON passenger door	VCDA	
			Bosch Parking Control Unit	VCDAS042	
			G.E.PROCOND Driver's Door	VCDA	
			G.E.PROCOND Passenger Door	VCDA	
			Single BITRON Driver's Door	VCDA	
			Single Driver's Door	VCDA	
		'06 1.2 8V	Engine-Gearbox	Injection - Magneti Marelli JAW	VCDAS014
				Magneti Marelli JAW 4AP/4EF/59F/5AF	VCDAS014
			Instrumentation	Marelli 3 Connect (multi-model)	VCDA
Siemens instrument panel	VCDAS058				
Safety	ESP TRW Lucas ABS		VCDAS013		
	Marelli 7 Body Computer		VCDAS047		
	TRW Lucas ABS		VCDAS015		
Comfort	DELPHI Electric Steering		VCDS044		
	Denso Climate Control (Two-zone)		VCDAS007		
	Marelli/Microsoft Convergence		VCDAS004		
Other systems	Bosch Parking Control Unit		VCDAS042		

	Engine-Gearbox	Marelli Automatic Gearbox SELESPEED	VCDAS055
		Marelli Diesel injection 6F3 EOBD (eng. 1.3)	VCDAS051
		Marelli 3 Connect (multi-model)	VCDA

## LANCIA V10.10 Diagnostics List(Note:For reference only)

	'06 1.3 JTD	Instrumentation	Siemens instrument panel	VCDAS058
		Safety	ESP TRW Lucas ABS	VCDAS013
			Marelli 7 Body Computer	VCDAS047
			TRW Lucas ABS	VCDAS015
		Comfort	DELPHI Electric Steering	VCDS044
			Denso Climate Control (Two-zone)	VCDAS007
	Marelli/Microsoft Convergence		VCDAS004	
	Other systems	Bosch Parking Control Unit	VCDAS042	
	'06 1.4 16V	Engine-Gearbox	Bosch Motronic ME7.3H4M EOBD Injection	VCDAS001
			Marelli SELF SPEED CFC228F Automatic	VCDAS043
		Instrumentation	Marelli 3 Connect (multi-model)	VCDA
			Siemens instrument panel	VCDAS058
		Safety	ESP TRW Lucas ABS	VCDAS013
			Marelli 7 Body Computer	VCDAS047
			TRW Lucas ABS	VCDAS015
		Comfort	DELPHI Electric Steering	VCDS044
			Denso Climate Control (Two-zone)	VCDAS007
			Marelli/Microsoft Convergence	VCDAS004
		Other systems	Bosch Parking Control Unit	VCDAS042
Engine-Gearbox		Marelli Marelli Injection IAW 5SF	VCDAS025	
		Instrumentation	Marelli 3 Connect (multi-model)	VCDA
	Siemens instrument panel		VCDAS058	
		ESP TRW Lucas ABS	VCDAS013	



'06 1.4 8V

Safety	Marelli 7 Body Computer	VCDAS047
	TRW Lucas ABS	VCDAS015

## LANCIA V10.10 Diagnostics List(Note:For reference only)

		Comfort	DELPHI Electric Steering	VCDS044
			Denso Climate Control (Two-zone)	VCDAS007
			Marelli/Microsoft Convergence	VCDAS004
		Other systems	Bosch Parking Control Unit	VCDAS042
0.9 TURBO TWIN AIR		Engine-Gearbox	Automatic Gearbox Marelli SELES/EPD	VCDAS066
			Magnet Marelli IAW 8GSF CF9/EOBD	VCDAS064
		Instrumentation	Continental instrument panel (EP)	VCDAS077
			Lauberhorn Convergence (EP)	VCDAS081
		Safety	Bosch ABS 9 (EP)	VCDAS067
			Bosch ABS 9 ESP (EP)	VCDAS068
			Delphi (EP) 6 Body Computer	VCDAS076
			Bosch Air bag (EP)	VCDA
		Comfort	Denso Heater (EP)	VCDA
			DELPHI Electric Steering (EP) 4	VCDS078
			Marelli Single-Zone Automatic Climate	VCDAS079
		Other systems	VALEO Parking Control unit (EP) 2	VCDAS069
			Litronic discharge headlamp (left)	VCDA
			Litronic discharge headlamp (right)	VCD
Valeo Semi-Automatic Parking Control Unit	VCDAS080			
Engine-Gearbox	Magnet Marelli Injection IAW 5SF9	VCDAS065		
	Magnet Marelli Injection 5SF87/SDU	VCDAS074		

Instrumentation	Continental instrument panel (EP)	VCDAS077
	Lauberhorn Convergence (EP)	VCDAS081
	Bosch ABS 9 (EP)	VCDAS067
	Bosch ABS 9 ESP (EP)	VCDAS068

## LANCIA V10.10 Diagnostics List(Note:For reference only)

YPSILON(402)

1.2 8V	Safety	Delphi (EP) 6 Body Computer	VCDAS076	
		Bosch Air bag (EP)	VCDA	
	Comfort	Denso Heater (EP)	VCDA	
		DELPHI Electric Steering (EP) 4	VCDS078	
		Marelli Single-Zone Automatic Climate	VCDAS079	
	Other systems	VALEO Parking Control unit (EP) 2	VCDAS069	
		Litronic discharge headlamp (left)	VCDA	
		Litronic discharge headlamp (right)	VCD	
		Valeo Semi-Automatic Parking Control Unit	VCDAS080	
		Marelli Diesel Injection 8F3 CF5/EOBD (EP)	VCDAS075	
	1.3 MJET 16V	Engine-Gearbox		
		Instrumentation	Continental instrument panel (EP)	VCDAS077
			Lauberhorn Convergence (EP)	VCDAS081
		Safety	Bosch ABS 9 (EP)	VCDAS067
Bosch ABS 9 ESP (EP)			VCDAS068	
Delphi (EP) 6 Body Computer			VCDAS076	
Bosch Air bag (EP)			VCDA	
Comfort		Denso Heater (EP)	VCDA	
		DELPHI Electric Steering (EP) 4	VCDS078	
		Marelli Single-Zone Automatic Climate	VCDAS079	
Other systems	VALEO Parking Control unit (EP) 2	VCDAS069		
	Valeo Semi-Automatic Parking Control Unit	VCDAS080		

Z	'00 2.0 16v	Magneti Marelli MM4.8P PSA injection	VCDA
	'00 2.0 JTD	Bosch EDC 15 PSA Diesel Injection (2.0 8v v60 eng.)	VCDA
		Bosch EDC 15 PSA Diesel Injection (eng. 16v)	VCDAS033
		Bosch EDC 15 PSA Diesel Injection (eng. 2.0 8v)	VCDA

LANCIA V10.10 Diagnostics List(Note:For reference only)		
	WEBASTO Heater (PSA)	VCDA

N.B.:

V: Control Unit Info  
C: Fault Codes  
D: Datastream  
A: Active Test  
S: Additional Functions

S001 Startup with Code Card  
S002 Startup with Code Card  
S002 Performance limiting  
S002 Neutral signal learn  
S002 Knock counter reset  
S002 Overboost counter reset  
S002 Self-learnt functions reset  
S002 Zeroing of self-adaption parameters  
S003 Headlamp pos. correct.  
S003 Inputs status  
S003 Servicing information delete  
S003 Reset odometer  
S003 Seat belts alarm exclusion  
S003 Seat belts alarm enable  
S003 Oil change servicing information delete

S003	Instrument panel replacement
S004	Audio System Test
S004	Convergence system
S005	Restart Siren Serial line check
S005	Ultrasound sensor check
S005	Tilt sensor check(if present)
S005	Dusk and rain sensors check
S005	Indicators command enable/disable
S005	Inertia switch rearm(FIS)
S005	Key programming
S006	Yaw sensor calibration
S006	Lateral accel. Sensor calibration
S006	Pressure sensor calibration
S006	Accept configuration
S006	Longit. Acc. Sensor calibration
S006	Accelerat. And yaw sensors calibration
S006	Recognition of speed sensor type
S007	Conditioner compressor
S007	Flap actuators learning test
S007	Pollution sensor test
S007	Autotest
S008	Steering angle calibration
S008	Mounting check
S009	Startup with Code Card
S009	Injector codes read

S009	Neutral signal learn
S009	Replacement of injector cyl.1
S009	Replacement of injector cyl.2
S009	Replacement of injector cyl.3
S009	Replacement of injector cyl.4
S009	Injector replacement(per bank)
S009	Oil change(only for version with DPF)
S009	EGR valve replacement
S009	Variable geometry turbo replacement
S009	Rail pressure sensor replacement
S009	Replacement Lambda sensor
S009	Air flow meter sensor replacement
S009	Differential pressure sensor replacement(only for version with
DPF) S009	Pre-catalyser replacement(only for version with DPF)
S009	Particulate filter replacement (only for version with DPF)
S009	Replacement of particulate filter with built-in pre-catalyzer(only for versions with
DPF) S009	Particulate filter regeneration(only for version with DPF)
S009	Resetting distance travelled with Water Temp.w.lamp
ON S009	Resetting distance travelled with Water in diesel w.lamp
ON S010	Accumulator depressurisation
S010	Clutch bleed
S010	End of line / service self-calibration
S010	Clutch self-calibration enable
S010	New actuators
S010	Satistical data deletion



S010	Clutch replacement
S010	KIT/Gearbox replacement
S010	Gearbox replacement
S010	Tunnel lever replacement
S010	Steering wheel levers replacement
S010	Electropump replacement
S010	Pump relay replacement
S010	AUTO switch replacement
S010	ECO/SPORT switch replacement
S010	Gearbox oil accumulator replacement L
S010	ongitudinal acceleration signal learn
S011	Gearbox lever position learn
S011	Self-adaptation parameter erasure
S012	Startup with Code Card
S012	Oil change
S012	Knock counter reset
S012	Overboost counter reset
S012	Self-learnt functions reset
S012	Zeroing of self-adapation parameters
S013	Steering angle calibration
S013	Yaw sensor calibration
S013	Lateral accel. Sensor calibration
S013	Pressure sensor calibration
S013	Accept configuration
S013	Longit. Acc. Sensor calibration

S014	Startup with Code Card
S014	Lambda sensor check
S015	Accept configuration
S016	Startup with Code Card
S016	Injector classification
S017	Accumulator depressurisation
S017	Clutch bleed
S017	End of line / service self-calibration
S017	Clutch self-calibration enable
S017	Calculation of clutch degradation index
S017	Gearbox replacement
S017	Hydraulic Kit replacement
S017	Gearbox and hydraulic KIT replacement
S017	Clutch replacement
S017	Tunnel lever replacement
S017	Electropump replacement
S017	Pump relay replacement
S017	ECO switch replacement
S017	Gearbox oil accumulator replacement
S017	Selection and/or engagement clutch electrovalve replacement
S017	Longitudinal acceleration signal learn
S018	Startup with Code Card
S018	Self-learnt functions reset
S018	Injector codes read
S018	Cyl.1 injector classification

S018	Cyl.2 injector classification
S018	Cyl.3 injector classification
S018	Cyl.4 injector classification
S018	Injector classification (4 cyl.blank)
S019	Startup with Code Card
S019	Injector codes read
S019	Neutral signal learn
S019	Replacement of injector cyl.1
S019	Replacement of injector cyl.2
S019	Replacement of injector cyl.3
S019	Replacement of injector cyl.4
S019	Injector replacement(per bank)
S019	Oil change
S019	Rail pressure sensor replacement
S019	Replacement Lambda sensor
S019	Air flow meter sensor replacement
S019	Phonic wheel replacement
S019	Differential pressure sensor replacement
S019	Particulate filter with integrated pre-cat replacement
S019	Particulate filter regeneration
S019	Mechanical waste-gate valve replacement
S019	Replacement of variable geometry turbo and/or turbo posit.
Sensor S019	Resetting distance travelled with Water Temp. w. lamp ON
S019	Resetting distance travelled with Water in diesel w. lamp
ON S020	Headlamp pos. correct.

S020	Inputs status
S020	Servicing information delete
S020	Reset odometer
S020	Seat belts alarm exclusion
S020	Seat belts alarm Enable
S020	Instrument panel replacement
S021	Headlamp pos. correct
S021	Inputs status
S021	Reset odometer
S021	Seat belts alarm exclusion
S021	Seat belts alarm enable
S021	Instrument panel replacement
S022	Flap actuators learning test
S022	Pollution sensor test
S023	Tow hook presence disable
S023	Tow hook presence enable
S024	Accumulator depressurisation
S024	Clutch bleed
S024	End of line / service self-calibration
S024	Clutch self-calibration enable
S024	New actuators
S024	Calculation of clutch degradation index
S024	Statistical data deletion
S024	Clutch replacement
S024	KIT/Gearbox replacement

S024	Gearbox replacement
S024	Tunnel lever replacement
S024	Electropump replacement
S024	Pump relay replacement
S024	ECO switch replacement
S024	Gearbox oil accumulator replacement
S024	Longitudinal acceleration signal learn
S025	Startup with Code Card
S025	Phonic wheel learn reset
S025	Zeroing of self-adaption parameters
S025	Throttle learn storage
S025	Vehicle configuration deletion
S025	Cruise Control Learn
S025	Air conditioner Learn
S025	Phase sensor learn zeroing
S026	Startup with Code Card
S026	Injector codes read
S026	Cyl.1 injector classification
S026	Cyl.2 injector classification
S026	Cyl.3 injector classification
S026	Cyl.4 injector classification
S026	Injector classification (4 cyl.blank)
S027	Startup with Code Card
S027	Injector codes read
S027	Replacement of injector cyl. 1

S027	Replacement of injector cyl. 2
S027	Replacement of injector cyl. 3
S027	Replacement of injector cyl. 4
S027	Replacement injectors (4 cyl. Bank)
S027	Control unit replacement
S027	Replacement of control unit and injector/s
S027	Air flow sensor replacement
S027	Replacement Lambda sensor
S027	Rail pressure sensor replacement
S027	Rail pressure sensor and injector/s replacement
S028	Voice synthesis test
S028	Cooling fans test
S028	Automatic emergency call activation
S028	Manual emergency call activation
S028	Assistance call activation
S028	Optical fibre test
S028	Backup battery replacement
S028	Personal data deletion
S028	VIN Code Configuration
S028	Call buttons Configuration
S028	Manual System Configuration
S028	Automatic Configuration Read
S028	Activation/Deactivation 'Auxiliary video input' procedure
S029	Dist. To Next Service Zeroing (Coupon)
	Wheel transmitters learning

S029	Tyre Pressure check	Looks for faulty wheel transmitter Looks for flat battery on wheel transmitter
S029	New vehicle preparation	Maintenance Services config. Customer mode Reset distance till next servicing
S029	Control Unit Replacement	Customer options Key programming Closure Safety Engine Gearbox Lights
S029 Configuration	Manual System	Visibility Various Driver warnings Select the type of vehicle
S030	System Configuration Read	
S031	Chassis number	
S032	Stored status deletion	
S033	Part. Filter regeneration	
S034	FAP Replacement	
S034	Additive type configuration	
S034	FAP Temperature Probe presence configuration	
S035	Zeroing of self-adaption parameters	
S036	Additional diesel circuit filling	
S036	Replacement of the additive,or the pump,or the tubes.	
S036	Particulate filter replacement (only for version with DPF)	
S036	EGR valve learn	
S036	Part. Filter regeneration	

S036	Replacement injector/s
S037	Automatic gearbox replacement
S037	Automatic gearbox and Control unit replacement
S037	Automatic gearbox oil replacement
S038	Part. Filter regeneration
S039	Startup with Code Card
S039	Injector codes read
S039	Replacement of injector cyl. 1
S039	Replacement of injector cyl. 2
S039	Replacement of injector cyl. 3
S039	Replacement of injector cyl. 4
S039	Replacement injector cyl. 5
S039	Injector replacement (per bank)
S039	Oil change (only for version with DPF)
S039	Rail pressure sensor replacement
S039	Lambda sensor replacement (only for version with lambda sensor)
S039	Air flow meter replacement (only for version with lambda
sensor) S039	Differential pressure sensor replacement (only for version with
DPF) S039	Pre-catalyser replacement (only for version with DPF)
S039	Particulate filter replacement (only for version with
DPF) S039	Particulate filter regeneration (only for version with
DPF) S040	Startup with Code Card
S040	Injector codes read
S040	Cyl. 1 injector classification
S040	Cyl. 2 injector classification



S040	Cyl. 3 injector classification
S040	Cyl. 4 injector classification
S040	Cyl.5 injector classification
S040	Injector classification (4 cyl. blank)
S040	Injector classification (5 cyl. blank)
S041	Siren serial line check
S041	Ultrasound sensor check
S041	Tilt sensor check (if present)
S041	Dusk and rain sensors check
S041	Window wash system check
S041	Country Standards Change
S042	Sensor vibration time too long
S043	Accumulator depressurisation
S043	Clutch bleed
S043	End of line / service self-calibration
S043	Clutch self-calibration enable
S043	New actuators
S043	Calculation of clutch degradation index
S043	Satistical data deletion
S043	Data deletion and return to initial values for clutch replacement
S043	Data deletion for KIT/Gearbox replacement
S043	Data deletion for tunnel lever replacement
S043	Data deletion for pump replacement
S043	Data deletion for KIT/Pump replacement
S043	Data deletion for pump relay replacement

S043	Deletion of statistical data relating to errors
S044	Servo Mechanism Group Replacement
S044	Engine - Control Unit Group Replacement
S045	Steering angle calibration
S045	Longit.acc.sensor calibration
S046	Siren serial line check
S046	Ultrasound sensor check
S046	Tilt sensor check(if present)
S046	Dusk and rain sensors check
S046	Window wash system check
S047	Dusk and rain sensors check
S047	Window wash system check
S048	next service km's reset
S048	Light setting corr.
S048	trip counter reset
S049	Startup with Code Card
S049	Zeroing of self-adaption parameters
S050	Electronic Key release
S050	EGR
S051	Startup with Code Card
S051	Replacement of injector cyl. 1
S051	Replacement of injector cyl. 2
S051	Replacement of injector cyl. 3
S051	Replacement of injector cyl. 4
S051	Oil change (only for version with DPF)

S051	Phonic wheel replacement
S051	Rail pressure sensor replacement
S051	Lambda sensor replacement (only for version with lambda sensor)
S051	Air flow meter replacement (only for version with lambda
sensor) S051	Differential pressure sensor replacement (only for version with
DPF) S051	Pre-catalyser replacement (only for version with DPF)
S051	Particulate filter replacement (only for version with
DPF) S052	Steering angle calibration
S052	Test limit speed disable
S052	Test limit speed restore
S052	Brake bleed
S053	Reset self-adapt. param. and idle act
S054	Oil Counter Write
S054	Self-adaptive parameters
S054	Sequence EV. 1
S054	Sequence EV. 2
S054	Sequence EV. 3
S054	Sequence EV. 4
S054	Sequence EV. 5
S054	Sequence EV. 6
S054	Heat exchang. Flow EV.
S055	Accumulator depressurisation
S055	Clutch bleed
S055	End of line / service self-calibration
S055	Clutch self-calibration enable

S055	New actuators
S055	Calculation of clutch degradation index
S055	Engagement lever pin securing screw diagnosis
S055	Selection lever return diagnosis
S055	Statistical data deletion
S055	Deletion of statistical data relating to errors
S055	Data deletion and return to initial values for clutch replacement
S055	Data deletion for KIT/Gearbox replacement
S055	Data deletion for tunnel lever replacement
S055	Data deletion for pump replacement
S055	Data deletion for KIT/Pump replacement
S055	Data deletion for pump relay replacement
S055	Deletion of CITY switch replacement data
S055	Deletion of SPORT switch replacement data
S055	Data deletion for steering wheel levers replacement
S056	Tow hook presence disable
S056	Tow hook presence enable
S056	Parking manoeuvre status
S057	Antenna replacement
S057	Control unit replacement
S057	Alarm deletion
S057	Wheel transmitters learning
S057	Control unit activation
S057	Control unit deactivation
S057	Alarm state check

S058	Headlamp pos.correct.
S058	Servicing information delete
S058	Reset odometer
S058	Seat belts alarm exclusion
S058	Seat belts alarm Enable
S058	Instrument panel replacement
S059	Tow hook presence disable
S059	Tow hook presence enable
S060	Reset odometer
S060	Servicing information delete
S060	Odometer write
S060	Intrument panel replacement
S061	Steering angle calibration
S061	Vehicle type learn reset
S062	Headlight actuators - high
S062	Headlight actuators - intermediate
S062	Headlight actuators - low
S062	System calibration
S063	Headlight actuators - high
S063	Headlight actuators - intermediate
S063	Headlight actuators - low
S063	System calibration
S064	Startup with Code Card
S064	Self - learnt functions reset
S064	Zeroing of self - adaption parameters

S064	Neutral signal learn
S064	Performance limiting deactivation
S064	Oil change
S064	Motorised throttle replacement
S064	MultiAir Rolling finger replacement
S064	Timing sensor and/or cam replacement
S064	Rpm sensor and/or timing chain replacement
S064	Oil temperature sensor replacement
S064	Phonic wheel replacement
S064	UniAir module replacement
S064	Intelligent alternator (IAM) replacement
S064	Supercharging system components replacement
S064	Downstream lambda sensor and/or catalyzer and/or Injectors
replacement S065	Startup with Code Card
S065	Throttle learn storage
S065	Vehicle configuration deletion
S065	Phonic wheel learn reset
S065	Zeroing of self-adaption parameters
S065	Cam edges zeroing(VVT)
S065	Neutral signal learn
S066	Self-learnt functions reset
S066	Pump relay replacement
S066	Tunnel lever replacement
S066	Steering wheel levers replacement
S066	AUTO switch replacement

S066	ECO/SPORT switch replacement
S066	Clutch self-calibration enable
S066	Accumulator depressurisation
S066	New actuators
S066	Clutch bleed
S066	End of line/service self-calibration
S066	Longitudinal acceleration signal learn
S067	Static test
S068	Static test
S068	Lateral and longitud.acceleration sensor calibration
S068	Steering angle calibration
S068	Longitudinal/lateral Accel.sens.Calibration reset
S069	Tow hook presence disable
S069	Tow hook presence enable
S070	Brake bleed
S070	Steering angle calibration
S070	Steering angle reset
S070	Longit. acc. sensor calibration
S071	System Configuration Read
S071	control Unit Unlock
S072	Manual System Configuration
S072	Automatic Configuration Read
S072	Automatic Configuration Write
S072	United Kingdom(Thatcham std)
S072	Volumetric sensors automatic diagnosis

S073	Manual System Configuration
S073	Deletion stored buttons
S073	Automatic Configuration Read
S073	Automatic Configuration Write
S074	Startup with Code Card
S074	Throttle learn storage
S074	Vehicle configuration deletion
S074	Phonic wheel learn reset
S074	Zeroing of self-adaption parameters
S074	Cam edges zeroing(VVT)
S075	Startup with Code Card
S075	Injector codes read
S075	Speed limit setting
S075	Neutral signal learn
S075	Replacement of injector cyl. 1
S075	Replacement of injector cyl. 2
S075	Replacement of injector cyl. 3
S075	Replacement of injector cyl. 4
S075	Injector replacement(per bank)
S075	Oil change
S075	Phonic wheel replacement
S075	Rail pressure sensor replacement
S075	Replacement lambda sensor
S075	Air flow meter sensor replacement
S075	Differential pressure sensor replacement



S075	Particulate filter with intergrated pre-cat replacement
S075	Particulate filter regeneration
S075	Intelligent alternator (IAM) replacement
S075	Mechanical waste-gate valve replacement
S075	Replacement of variable geometry turbo and/or turbo posit.
Sensor S075	Resetting distance travelled with Water Temp. w. lamp ON
S075	Resetting distance travelled with Water in diesel w. lamp
ON S075	EGR valve test
S075	Throttle test
S075	Glow plug preheating circuit test
S075	Self-learnt functions reset
S076	Windowscreen wiper relay speed 1
S076	Windowscreen wiper relay speed 2
S076	Driver's side wind. Lift.
S076	Motion Pass. Side wind. Lift.
S076	Motion Inertia switch rearm (FIS)
S076	Indicators command enable/disable
S076	Country Standards Change
S076	Power Mode Gearbox
S077	Headlamp pos. correct
S077	Servicing information delete
S077	Reset odometer
S077	Seat belts alarm exclusion
S077	Seat belts alarm Enable
S077	Instrument panel replacement

S078	Position sensor calibration
S079	Flap actuators learning test
S080	Tow hook presence disable
S080	Tow hook presence enable
S080	Parking manoeuvre status
S081	Audio System Test
S081	Convergence System Restart
S082	Cooling fans test
S082	Automatic emergency call activation
S082	Manual emergency call activation
S082	Assistance call activation
S082	Backup battery replacement
S082	Personal data deletion
S082	JukeBox data deletion
S082	VIN Code Configuration
S082	Call buttons Configuration
S082	Manual System Configuration
S082	Automatic Configuration Read
S082	Automatic Configuration Write
S083	Brake bleed
S083	Steering angle calibration
S083	Steering angle reset
S084	System configuration
S085	Voice synthesis test
S085	Cooling fans test

S085	Automatic emergency call activation
S085	Manual emergency call activation
S085	Assistance call activation
S085	Optical fibre test
S085	Backup battery replacement
S085	Personal data deletion
S085	VIN Code Configuration
S085	Call buttons configuration
S086	Looks for faulty wheel transmitter
S086	Wheel transmitters learning
S086	Wheel identification check
S086	Control unit deactivation
S086	Control unit activation
S087	FAP Replacement
S087	Control unit replacement
S087	Engine type configuration
S088	Dist. To Next Service Zeroing(Coupon)
S089	Flap actuators learning test
S089	Pollution sensor test