

LANDROVER V13.10 Diagnostics List (Note: For reference only)

Model	Year	ENGTYP	PCM	TCM	ABS	SRS	IP	RLCM	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GWCM	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/TCM	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset	
2014-2015	Super charged V6	CDS19,S14,S30,S55,S134	CD	CD	CDS109	CDS132	CDS116	CDS137,S16,S55,S63,S83,S89,S94	CDS44,S45,S012,S104	CDS149,S152,S179,S80	CD				CDS92,S86,S87,S91	CDS95	CDS144	CDS84	CD	CDS157,S59	CDS37	CDS39	CDS38	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CD	CDS150,S110,S111	CD	CDS129	CDS128	CDS126	CDS130	CD	CD	CD	MOR	
	Normally aspirated V6	CDS19,S14,S30,S55,S134	CD	CD	CDS109	CDS132	CDS116	CDS137,S16,S55,S63,S83,S89,S94,S133	CDS44,S45,S012,S104	CDS149,S152,S179,S80	CD				CDS92,S86,S87,S91	CDS95	CDS144	CDS84	CD	CDS157,S59	CDS37	CDS39	CDS38	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CD	CDS150,S110,S111	CD	CDS129	CDS128	CDS126	CDS130	CD	CD	CD	MOR	
	3.0L Diesel V6	CDS19,S47,S48,S50,S52,S58,S74,S75,S76,S77,S81,S82,S88,S108	CD	CD	CDS109	CDS132	CDS116	CDS137,S16,S55,S63,S83,S89,S94,S133	CDS44,S45,S012,S104	CDS149,S152,S179,S80	CD					CDS92,S86,S87,S91	CDS95	CDS144	CDS84	CD	CDS157,S59	CDS37	CDS39	CDS38	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CD	CDS150,S110,S111	CD	CDS129	CDS128	CDS126	CDS130	CD	CD	CD	MOR
	4.4L Diesel V8	CDS19S47S48S50S52S58S74S75S76S77S81S82S88S108	CD	CD	CDS109	CDS132	CDS116	CDS137S36S55S63S83S89S94S101S104S133	CDS44S45S012S104	CDS149S152S179S80	CD					CDS92S86S87S91	CDS95	CDS144	CDS84	CD	CDS157S59	CDS37	CDS39	CDS38	CDS145	CD	CD		CDS105	CDS64		CDS26S27	CD	CDS54	CD	CDS150S110S111	CD	CDS129	CDS128	CDS126	CDS130	CD	CD	CD	MOR

LANDROVER V13.10 Diagnostics List (Note: For reference only)

Model	Year	ENGTYP	PCM	TCM	ABS	SRS	IP	RLCM	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GWCM	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/TCM	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset
Range Rover		SuperChargedPetrolV8	CDVS58,S30,S122,S134	CDVS14	CDV	CDVS109	CDVS132		CDVS55,S56,S83,S89,S94,S36,S63,S133,S137	CDVS43S44S45S102S104S116	CDVS79S80S84S149		CDV		CDVS86,S87,S91,S92,S93	CDVS95	CDV		CDV	CDVS96,S97,S98,S157,S168	CDVS37	CDVS39	CDVS38	CDVS145	CDV	CDVS123,S169	CDVS105	CDV		CDVS26,S27		CDVS54	CDVS66	CDVS10S111,S166	CDVS96	CDVS125,S129	CD	CDS126	CDVS130	CDVS127	CD	CD		
	2013	DieselV6	CDVS58,S46,S52,S74,S75,S81,S88,S82,S47,S108,S76,S77	CDVS14	CDV	CDVS109	CDVS132		CDVS55,S56,S83,S89,S94,S36,S63,S133,S137	CDVS43S44S45S102S104S116	CDVS79S80S84S149		CDV		CDVS86,S87,S91,S92,S93	CDVS95	CDV		CDV	CDVS96,S97,S98,S157,S168	CDVS37	CDVS39	CDVS38	CDVS145	CDV	CDVS123,S169	CDVS105	CDV		CDVS26,S27		CDVS54	CDVS66	CDVS10S111,S166	CDVS96	CDVS125,S129	CD	CDS126	CDVS130	CDVS127	CD	CD		
		DieselV6	CDVS58,S46,S52,S74,S75,S81,S88,S82,S47,S108,S76,S77	CDVS14	CDV	CDVS109	CDVS132		CDVS55,S56,S83,S89,S94,S36,S63,S133,S137	CDVS43,S44S45,S102S104,S116	CDVS79S80,S84S149		CDV		CDVS86,S87,S91,S92,S93	CDVS95	CDV		CDV	CDVS96,S97,S98,S157,S168	CDVS37	CDVS39	CDVS38	CDS145	CDV	CDVS123,S169	CDVS105	CDV		CDVS26,S27		CDVS54	CDVS66	CDVS10,S111,S166	CDVS96	CDVS125,S129	CD	CDS126	CDVS130	CDVS127	CD	CD		
		SuperchargedV6	CDS19,S14,S30,S53,S134	CD	CD	CDS109	CDS132	CDS116		CDS36,S53,S63,S83,S89,S94,S133,S137	CDS44S45S102S104	CDS79,S149,S152		CD		CDS92,S86,S87,S91	CDS95	CDS144	CD	CD	CDS157	CD	CDVS39	CD	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CDS66	CDS110,S150	CDS59	CDS125	CDS128	CD	CDS130	CD	CD	CD

LANDROVER V13.10 Diagnostics List (Note: For reference only)

Model	Year	ENGTYP	PCM	TCM	ABS	SRS	IP	RLCM	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GWCM	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/TCM	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset	
2014-2015	Supercharged V8	CDS19,S14,S30,S53,S134	CD	CD	CDS109	CDS132	CDS116	S36,S55,S63,S83,S89,S94,S133	CDS44,S45,S102,S104	CDS79,S149,S152	CD				CDS92,S86,S87,S91	CDS95	CDS144	CD	CD	CDS157	CD	CDVS39	CD	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CDS66	CDS110,S150	CDS59	CDS125	CDS128	CD	CDS130	CD	CD	CD	MOR	
	Normally aspirated V8	CDS19,S14,S30,S53,S134	CD	CD	CDS109	CDS132	CDS116	S36,S55,S63,S83,S89,S94,S133,S137,S139	CDS44,S45,S102,S104	CDS79,S149,S152	CD				CDS92,S86,S87,S91	CDS95	CDS144	CD	CD	CDS157	CD	CDVS39	CD	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CDS66	CDS110,S150	CDS59	CDS125	CDS128	CD	CDS130	CD	CD	CD	MOR	
	3.0L Diesel V6	CDS19,S47,S48,S50,S52,S58,S74,S75,S76,S77,S81,S82,S103	CD	CD	CDS109	CDS132	CDS116	S36,S55,S63,S83,S89,S94,S133,S137,S139	CDS44,S45,S102,S104	CDS79,S149,S152	CD					CDS92,S86,S87,S91	CDS95	CDS144	CD	CD	CDS157	CD	CDVS39	CD	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CDS66	CDS110,S150	CDS59	CDS125	CDS128	CD	CDS130	CD	CD	CD	MOR
	4.4L Diesel V8	CDS19,S47,S48,S50,S52,S58,S74,S75,S76,S77,S81,S82,S103	CD	CD	CDS109	CDS132	CDS116	S36,S55,S63,S83,S89,S94,S133,S137,S139	CDS44,S45,S102,S104	CDS79,S149,S152	CD					CDS92,S86,S87,S91	CDS95	CDS144	CD	CD	CDS157	CD	CDVS39	CD	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CDS66	CDS110,S150	CDS59	CDS125	CDS128	CD	CDS130	CD	CD	CD	MOR

LANDROVER V13.10 Diagnostics List (Note: For reference only)

Model	Year	ENGTYP	PCM	TCM	ABS	SRS	IP	RLCM	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GWCM	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/TCM	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset
		2.0L PetrolGTDi	CDS19,S14,S30,S58,S134	CD	CD	CDS109	CDS132	CDS116	CDS36,S55,S63,S83,S89,S94,S133,S137,S139	CDS44,S45,S102,S104	CDS79,S149,S152		CD		CDS92,S86,S87,S91	CDS95	CDS144	CD	CD	CDS157	CD	CDVS39	CD	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CDS66	CDS110,S150	CDS59	CDS125	CDS128	CD	CDS130	CD	CD	CD	MOR
		Hybrid	CDS19,S47,S48,S50,S52,S58,S74,S75,S76,S77,S81,S82,S103	CD	CDS109	CDS132	CDS116	CDS36,S55,S63,S83,S89,S94,S133,S137,S139	CDS44,S45,S102,S104	CDS79,S149,S152		CD		CDS92,S86,S87,S91	CDS95	CDS144	CD	CD	CDS157	CD	CD	CDVS39	CD	CDS145	CD	CD		CDS105	CDS64		CDS26,S27	CD	CDS54	CDS66	CDS110,S150	CDS59	CDS125	CDS128	CD	CDS130	CD	CD	CD	MOR
Range Rover Evoque	2012-2013	Petrol(2.0L)	CDVS14,S108,S30,S75,S98,S115,S131	CDV,S85,S14	CDVS18,S22,S32,S33,S34	CDVS109	CDVS19,S132		CDVS55,S56,S59,S88,S63		CDVS80,S79,S112		CDV		CDV,S86,S87,S91,S92,S93	CDV	CDV	CDVS84,S107	CDV		CDVS37	CDV	CDV	CDV	CDV		CDVS43		CDV		CDV,S54	CDVS6	CDVS11,S110		CD,S125,S129	CD,S128	CD,S126	CD,S130	CD,S127	CD	CD	MOR		
		Diesel(2.2L)	CDV,S58,S46,S52,S47,S62,S75,S90,S8,S131	CDV,S85,S14	CDVS18,S22,S32,S33,S34	CDVS109	CDVS19,S132		CDVS55,S56,S59,S88,S63		CDVS80,S79,S112		CDV		CDV,S86,S87,S91,S92,S93	CDV	CDV	CDVS84,S107	CDV		CDVS37	CDV	CDV	CDV	CDV		CDVS43		CDV		CDV,S54	CDVS6	CDVS11,S110		CD,S125,S129	CD,S128	CD,S126	CD,S130	CD,S127	CD	CD	MOR		

LANDROVER V13.10 Diagnostics List (Note: For reference only)

Model	Year	ENGTYP	PCM	TCM	ABS	SRS	IP	RLCM	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GW	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/TCM	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset
	2014-2015	2.0L Petrol GTDI	CDS19,S14,S30,S13	CD	CDS18,S33	CDS109	CD	CDS43	CDS55,S63,S89,S94,S133,S160,S137		CDS79,S80,S112,S152,S161,S162,S163		CDS43		CDS86,S87,S91,S92	CDS95	CD	CDS84	CD	CDS59,S157	CDS37	CDS39	CDS38		CD	CD		S105	CD			CD	CDS54	CDS66	CDS110,S111,S150	CD	CDS129	CDS128	CDS126	CD	CD	CD	CD	MOR
		Diesel	CDS19,S81,S74,S75,S76,S77,S47,S50,S48,S108,S52,S62,S82,S99	CD	CDS18,S33	CDS109	CD	CDS43	CDS55,S63,S89,S94,S133,S160,S137		CDS79,S80,S112,S152,S161,S162,S163		CDS43		CDS86,S87,S91,S92	CDS95	CD	CDS84	CD	CDS59,S157	CDS37	CDS39	CDS38		CD	CD		S105	CD			CD	CDS54	CDS66	CDS110,S111,S150	CD	CDS129	CDS128	CDS126	CD	CD	CD	CD	MOR

- S1: Reset adaptations
- S2: Configuration
- S3: Calibration 'G' Sensor
- S4: INSTRUMENT PACK RENEWAL
- S5: Remote key (PLIP) program
- S6: EKA display
- S7: Read/Set Injector Grades
- S8: Suspension configuration
- S9: SLS suspension calibration
- S10: SLS transfer mode set
- S11: Steering column correction
- S12: Height recalibration
- S13: Headlight calibration
- S14: Adaption clear
- S15: Rain sensor initialisation
- S16: Sliding roof module initialisation
- S17: Driver's memory seat calibration
- S18: Steering wheel angle sensor calibration
- S19: Service interval reset
- S20: Drive the parking brake to the mounting position.
- S21: Drive the parking brake to the latching position.
- S22: Longitudinal accelerometer sensor calibration
- S23: Brake bleed.
- S24: Parking brake unjam procedure.
- S25: Rain sensor windshield setup
- S26: Service mode enabled.
- S27: Service mode disabled
- S28: Seat cushion replacement.
- S29: Third button configuration
- S30: Fuel prime routine.
- S31: Gear selector sensor calibration.
- S32: Lateral accelerometer calibration
- S33: Pressure sensor calibration
- S34: Roll rate sensor calibration
- S35: Yaw Rate sensor calibration
- S36: Sunroof calibration
- S37: Driver's door window glass calibration
- S38: Passenger's door window glass calibration
- S39: Driver's seat calibration
- S40: Humidity sensor replacement
- S41: Seat heater module calibration
- S42: Stepper motor replacement
- S43: Air suspension height calibration
- S44: Air suspension deflation
- S45: Air suspension enable
- S46: Diesel particulate filter dynamic regeneration
- S47: Injector replacement
- S48: Diesel fueling adaption re-initialization
- S49: Exhaust gas recirculation replacement
- S50: Diesel particulate filter differential pressure sensor replacement

LANDROVER V13.10 Diagnostics List (Note: For reference only)

Model	Year	ENGTYP	PCM	TCM	ABS	SRS	IP	RLCM	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GWCM	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/TCM	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset
-------	------	--------	-----	-----	-----	-----	----	------	-----	------	------	------	------	-----	------	------	------	------	------	------	-----	-----	-----	-----	------	------	------	-----	------	-------------	------	-------	-------	-----	-----	----	-----	--------	------	------	--------	--------	-----	------------------

- S51:Diesel particulate filter air temperature sensor replacement
- S52:Diesel particulate filter replacement
- S53:Diesel lambda sensor replacement
- S54:Seats-Seat cover replacement
- S55:Tire pressure sensor replacement
- S56:Tire pressure monitor confirmation application
- S57:Security - Keyfob remote functionality
- S58:Oil service counter reset
- S59:Battery replacement
- S60:Evaporator and heater test
- S61:Seat entry/exit enable
- S62:Idle speed - Adjustment
- S63:Valet mode reset
- S64:Control module calibration
- S65:Fuel consumption units
- S66:Headlamp control module system calibration
- S67:Message centre display contrast
- S68:Pilot correction learning
- S69:Pre-delivery inspection
- S70:Pump replacement
- S71:Speed limitation
- S72:Program keys
- S73:Boost pressure actuator replacement
- S74:Exhaust gas recirculation valve
- S75:Throttle valve actuator
- S76:Oxygen sensor
- S77:Oxidation catalyst
- S78:Crash status reset
- S79:Actuators end stop detection
- S80:Stepper motor initialisation
- S81:Reset water in fuel detection
- S82:Turbine shut-off valve
- S83:Steering column calibration
- S84:Auxiliary heater priming routine
- S85:Transmission control module oil counter reset
- S86:Parking brake pad replacement - Release to service position
- S87:Parking brake pad replacement - Exit maintenance mode application
- S88:Rest of world - Service interval options
- S89:Tire pressure monitor sensor identification display
- S90:Display injector correction factors
- S91:Parking brake activation
- S92:Longitudinal accelerometer calibration
- S93:Brake caliper replacement assembly test
- S94:Fuel pump supply - Enable/disable
- S95:Power steering soft-lock end stops reset routine
- S96:Test dual battery system
- S97:Fuel pump supply - Enable/disable
- S98:Injector valve test
- S99:Oil change reset
- S100:Diesel particulate filter reset
- S101:Exhaust gas recirculation throttle replacement reset
- S102:Set/un-set air suspension manufacturing/freeze mode
- S103:Build mode
- S104:Set/un-set air suspension tight tolerance mode (headlamp setting)
- S105:Speed control alignment
- S106:Service history data
- S107:Auxiliary heater activation test
- S108:Fuel Lift Pump
- S109:Restraints build mode
- S110:Check all antennas
- S111:Check passive keys enabled
- S112:Re-program all stepper motors
- S113:Idle speed test
- S114:Solenoid replacement
- S115:Purge valve self test
- S116:Set/un-set air suspension geometry set-up
- S117:Suspension tight tolerance control
- S118:OBDII readiness tests
- S119:Tyre circumference
- S120:Fuel tank volume
- S121:Auxiliary heater fuel delivery test
- S122:Adaption status
- S123:Absolute position sensor replacement

LANDROVER V13.10 Diagnostics List (Note: For reference only)

Model	Year	ENGTYP	PCM	TCM	ABS	SRS	IP	RLCM	BCM	CHCM	HVAC	VDCM	SASM	TPM	PBCM	PSCM	PACM	AHCM	VICM	GW	DDM	DSM	PDM	PSM	ATCM	TCCM	ADCM	SCM	RDCM	Rain Sensor	RBCM	Light	ROCSM	HCM	KVM	GM	AAM	RG/	IPMB	AFCM	SODCML	SODCMR	GSM	Manual Oil Reset
-------	------	--------	-----	-----	-----	-----	----	------	-----	------	------	------	------	-----	------	------	------	------	------	----	-----	-----	-----	-----	------	------	------	-----	------	-------------	------	-------	-------	-----	-----	----	-----	-----	------	------	--------	--------	-----	------------------

- S124:Front parking aid sensors 'Auto-On' activation
- S125:DVD region counter reset
- S126:Camera auto learn routine
- S127:Side object detection mode history
- S128:Tailgate(trunk) calibration
- S129:Calibrate dynamic volume control
- S130:Navigation reset
- S131:Adaptive fuel trim display
- S132:Vehicle reset
- S133:Transportation mode
- S134:Throttle valve actuator replacement
- S135:Tire pressure monitor transmitter functionality
- S136:Ride level control module inflation (showroom) MOR:Manually Reset Service
- S137:Verify Keys
- S138:Activate telematics control module
- S139:Automatic high beam camera calibration
- S140:Dynamic safety belt retract and release
- S141:Emergency call and breakdown call switch illumination test
- S142:Network registration status
- S143:Operational mode
- S144:Parking aid switch-Enable/disable
- S145:Passenger's seat calibration
- S146:Pre-activate telematics control module
- S147:Rear seat-calibration-Left
- S148:Rear seat calibration Right
- S149:Reset compressor protection counter
- S150:Recover programmed keys
- S151:Clear/reset WIFI hotspot
- S152:Seat climate control module calibration
- S153:Telematics control module battery replacement reset
- S154:Telematics server communication check
- S155:Telematics sim card type
- S156:Test internal backup battery
- S157:Quiescent current control module internal check
- S158:Height ReCalibration
- S159:Calf rest calibration
- S160:Roof blind calibration
- S161:Run in air conditioning compressor
- S162:Climate seat unlock
- S163:Reset air conditioning compressor
- S164:All wheel drive - High oil temperature reset
- S165:All wheel drive - System flush
- S166:Keyless latch configuration
- S167:Rear 60/40 seat configuration
- S168:Verify secondary battery charging
- S169:Motor replacement