

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	FUNCTIONS
Alhambra I	1996>2010	25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		15 Airbags	B01,B02,B03,B04
		16 Steering Wheel Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		18 Aux heating	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		22 4WD Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		29 Left light control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		36 Driver's side seat adj.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		39 Right light control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		45 Interior Monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09		
56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09		

		76 Parking aid	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		01 Engine electronics	B01,B02,B03,B04,S01,S02,S03,
		02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,
		03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,
		08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Exeo	2010>	09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,
		10 Parking Assist System 2	B01,B02,B03,B04,S01,S02,S03,
		15 Airbags	B01,B02,B03,B04
		16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,
		17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,
		25 Immobilizer	B01,B02,B03,B04,S01,S02,S03,
		37 Navigation	B01,B02,B03,B04,S01,S02,S03,
		36 Driver's side seat adj.	B01,B02,B03,B04,S01,S02,S03,
		45 Interior Monitoring	B01,B02,B03,B04,S01,S02,S03,
		46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,
		4C Tyre Pressure Monitor II	B01,B02,B03,B04,S01,S02,S03,
		55 Headlight range control	B01,B02,B03,B04,S01,S02,S03,
		56 Radio	B01,B02,B03,B04,S01,S02,S03,
		77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,
		01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		08 AC/Heating	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

electronics	
25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
15 Airbags	B01,B02,B03,B04
16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Alhambra	2011 >	19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		07 DISPLAY-/CNT L UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08		

42 DRIVER- DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
52 PASSE.- DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
3C Lane Departure Assistance Syst	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
5F Information Electronic Equipme	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Alhambra	2011 >	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		15 Airbags	B01,B02,B03,B04
		16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08		

56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
07 DISPLAY-/CNT L UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		3C Lane Departure Assistance Syst	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		5F Information Electronic Equipme	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		Toledo	1992>1999
02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09		
03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09		

		15 Airbags	B01,B02,B03,B04
		25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		41 Diesel pump electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		15 Airbags	B01,B02,B03,B04
		17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Leon/Toledo	2000>2005	19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		22 4WD Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		36 Driver's side seat adj.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		01 Engine electronics	B01,B02,B03,B04,S01,S02,S03,
		02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,
		03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,
		08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,
		0F Radio Tuner-Digital	B01,B02,B03,B04,S01,S02,S03,
		15 Airbags	B01,B02,B03,B04
		16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,
		17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,
		18 Aux heating	B01,B02,B03,B04,S01,S02,S03,

Leon

2011>

19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03,
25 Immobilizer	B01,B02,B03,B04,S01,S02,S03,
36 Driver's side seat adj.	B01,B02,B03,B04,S01,S02,S03,
37 Navigation	B01,B02,B03,B04,S01,S02,S03,
3D Special Function	B01,B02,B03,B04,S01,S02,S03,
42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,
44 Steering assistance	B01,B02,B03,B04,S01,S02,S03,

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,
		47 Soundsystem	B01,B02,B03,B04,S01,S02,S03,
		52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,
		55 Headlight range control	B01,B02,B03,B04,S01,S02,S03,
		56 Radio	B01,B02,B03,B04,S01,S02,S03,
		57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03,
		62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,
		69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03,
		72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,
		76 Parking aid	B01,B02,B03,B04,S01,S02,S03,
		77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,
		7D Auxiliary Heater	B01,B02,B03,B04,S01,S02,S03,
		01 Engine electronics	B01,B02,B03,B04,S01,S02,S03,
		02 Transmission Electronics	B01,B02,B03,B04,S01,S02,S03,
		03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,
		08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,
		0F Radio Tuner-	B01,B02,B03,B04,S01,S02,S03,

Digital	
15 Airbags	B01,B02,B03,B04
16 Steering Wheel Electronics	B01,B02,B03,B04,S01,S02,S03,
17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,
18 Aux heating	B01,B02,B03,B04,S01,S02,S03,
19 Gateway data bus	B01,B02,B03,B04,S01,S02,S03,
25 Immobilizer	B01,B02,B03,B04,S01,S02,S03,

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Altea/Toledo	2004>	36 Driver`s side seat adj.	B01,B02,B03,B04,S01,S02,S03,
		37 Navigation	B01,B02,B03,B04,S01,S02,S03,
		3D Special Function	B01,B02,B03,B04,S01,S02,S03,
		42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,
		44 Steering assistance	B01,B02,B03,B04,S01,S02,S03,
		46 Central Control Module	B01,B02,B03,B04,S01,S02,S03,
		47 Soundsystem	B01,B02,B03,B04,S01,S02,S03,
		52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,S01,S02,S03,
		55 Headlight range control	B01,B02,B03,B04,S01,S02,S03,
		56 Radio	B01,B02,B03,B04,S01,S02,S03,
		57 TV-TUNER	B01,B02,B03,B04,S01,S02,S03,
		62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,
		69 TRAILER FUNCTION	B01,B02,B03,B04,S01,S02,S03,
		72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,S01,S02,S03,
		76 Parking aid	B01,B02,B03,B04,S01,S02,S03,
77 TELEPHONE	B01,B02,B03,B04,S01,S02,S03,		
7D Auxiliary Heater	B01,B02,B03,B04,S01,S02,S03,		
		01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Arosa	1997>2004	02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		15 Airbags	B01,B02,B03,B04
		17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
Exeo	2010 >	01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		09 Electronic central electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		15 Airbags	B01,B02,B03,B04
		16 Steering column electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		17 Instrument cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		45 Interior Monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		01 Engine	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Ibiza/Cordoba	1993>2001	electronics	
		02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		15 Airbags	B01,B02,B03,B04
		17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		45 Interior Monitoring	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
za/Cordo	02>20	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		15 Airbags	B01,B02,B03,B04
		17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		25 Immobilizer	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		44 Steering assistance	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		55 Headlight range control	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		02 Transmission	B01,B02,B03,B04,S01,S02,S03,

Electronics	
03 Brake Electronics	B01,B02,B03,B04,S01,S02,S03,
08 AC/Heating electronics	B01,B02,B03,B04,S01,S02,S03,
09 Electronic Ctrl Electronics	B01,B02,B03,B04,S01,S02,S03,
10 Parking Assist System 2	B01,B02,B03,B04,S01,S02,S03,
15 Airbags	B01,B02,B03,B04
17 Instrument Cluster	B01,B02,B03,B04,S01,S02,S03,

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		15 Airbags	B01,B02,B03,B04
		16 Steering	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Wheel Electronics	
44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Mii	2012 >	09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		07 DISPLAY-/CNT L UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08		
72 RR-DOOR	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08		

		ELECTRONI.	
		0E Media player position I	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		3C Lane Departure Assistance Syst	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		5F Information Electronic Equipme	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Mii	2012 >	08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		15 Airbags	B01,B02,B03,B04
		16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
07 DISPLAY-/CNT L UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08		

53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		52 PASSE.- DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		0E Media player position I	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		3C Lane Departure Assistance Syst	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		5F Information Electronic Equipme	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
Toledo	2000>2004	01 Engine electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		02 Transmission Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		03 Brake Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		08 AC/Heating electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		15 Airbags	B01,B02,B03,B04
		17 Instrument Cluster	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		19 Gateway data bus	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09

		22 4WD Electronics	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		35 Central Locking	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		36 Driver's side seat adj.	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		37 Navigation	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		46 Central Control Module	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		56 Radio	B01,B02,B03,B04,B06,B08,S01,S02,S03,S04,S07,S09
		01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Toledo	2013 >	08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		15 Airbags	B01,B02,B03,B04
		16 Steering Wheel Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
07 DISPLAY-/CNT L UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08		

53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
		52 PASSE.- DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		0E Media player position I	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		4F Electronic central electric II	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		3C Lane Departure Assistance Syst	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		5F Information Electronic Equipme	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		01 Engine electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		02 Transmission Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		03 Brake electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		08 AC/Heating electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		25 Immobilizer	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		34 Self leveling suspension	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		15 Airbags	B01,B02,B03,B04
		16 Steering	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Wheel Electronics	
44 Steering assistance	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
17 Instrument Cluster	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
19 Gateway data bus	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
37 Navigation	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
46 Central Control Module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
76 Parking aid	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
09 Electronic Ctrl Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
55 Headlight range control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
Toledo	2013 >	56 Radio	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		65 Tyre pressure monitoring	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		05 ACCESS & PERMISSI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		07 DISPLAY-/CNT L UNIT	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		53 Parking Brake	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		22 4WD Electronics	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		26 Electric roof control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		29 Left light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		39 Right light control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		75 Emergency call module	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		42 DRIVER-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		52 PASSE.-DOOR ELECT.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		62 LR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		72 RR-DOOR ELECTRONI.	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		0E Media player position 1	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
4F Electronic	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08		

		central electric II	
		3C Lane Departure Assistance Syst	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		5F Information Electronic Equipme	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08
		61 Battery control	B01,B02,B03,B04,B05,B06,B07,S01,S02,S03,S04,S05,S06,S07,S08

NOTE:

Basic Functions	Special Functions
B01: Control Unit Info	S01: Output Tests
B02: Read Fault Codes	S02: Basic Settings
B03: Clear Fault Codes	S03: Adaptation
B04: Measuring Blocks (Live Data)	S04: Login
B05: Read FreFrame	S05: Access permission

Seat V12.02Diagnostics List(Note:For reference only)

MODEL	YEAR	SYSTEMS	Functions
B06: Readiness	S06: Coding II		
B07: identification services	S07: Code Module		
B08: Single Reading	S08: Long Code		
	S09: Chassis Number adjustment		